T15/A15

EOM

Engineering Operation & Maintenance

Original™ Series **METAL** Pumps

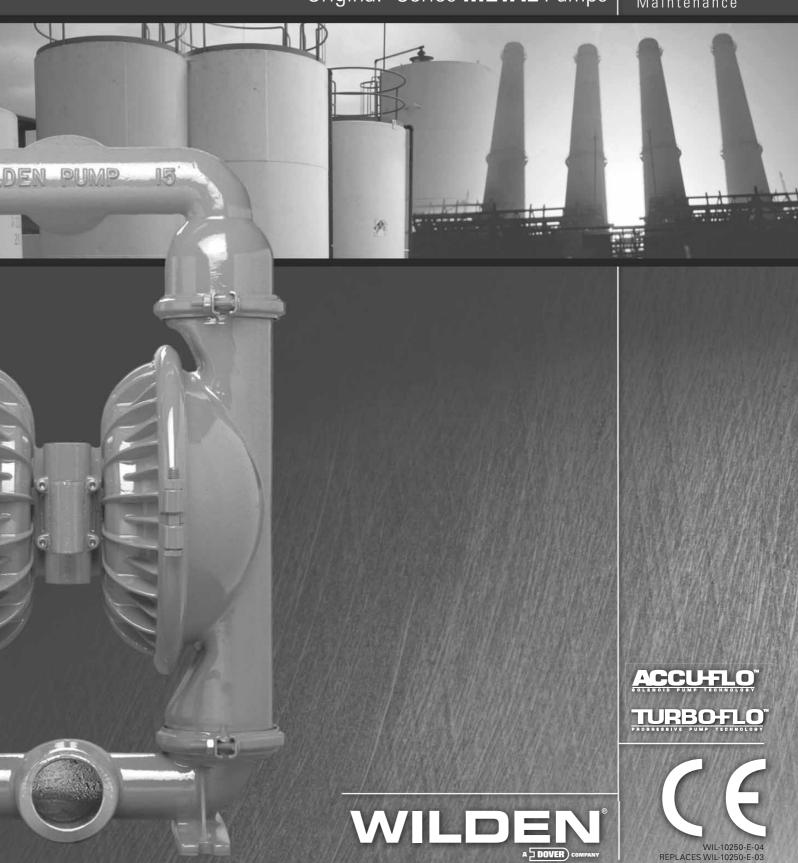




TABLE OF CONTENTS

SECTION 1	CAUTIONS—READ FIRST!
SECTION 2	WILDEN PUMP DESIGNATION SYSTEM2
SECTION 3	HOW IT WORKS—PUMP & AIR DISTRIBUTION SYSTEM
SECTION 4	DIMENSIONAL DRAWINGS4
SECTION 5	PERFORMANCE A. T15 Metal - Rubber-Fitted
SECTION 6	SUGGESTED INSTALLATION, OPERATION & TROUBLESHOOTING12
	ASSEMBLY / DISASSEMBLY17
SECTION 8	EXPLODED VIEW & PARTS LISTING T15 Metal Rubber/TPE-Fitted
SECTION 9	ELASTOMER OPTIONS
SECTION 10) REFERENCE









CAUTIONS—READ FIRST!



Neoprene	−17.8°C to	93.3°C	0°F to 200°F
Buna-N	−12.2°C to	82.2°C	10°F to 180°F
EPDM	−51.1°C to	137.8°C	–60°F to 280°F
Viton [®]	−40°C to	176.7°C	-40°F to 350°F
Wil-Flex™	−40°C to	107.2°C	-40°F to 225°F
Polyurethane			10°F to 150°F
Saniflex™			–20°F to 220°F
PTFE	4.4°C to	104.4°C	40° F to 220°F
Tetra-Flex™ P1	TFE 4.4°C to	107.2°C	40°F to 225°F
Fluoro-Seal™	−40°C to	232°C	-40°F to 450°F

- CAUTION: When choosing pump materials, be sure to check the temperature limits for all wetted components. Example: Viton- has a maximum limit of 176.7°C (350°F) but polypropylene has a maximum limit of only 79°C (175°F).
- CAUTION: Maximum temperature limits are based upon mechanical stress only. Certain chemicals will significantly reduce maximum safe operating temperatures. Consult engineering guide for chemical compatibility and temperature limits.
- **CAUTION:** Always wear safety glasses when operating pump. If diaphragm rupture occurs, material being pumped may be forced out air exhaust.
- **WARNING:** Prevention of static sparking If static sparking occurs, fire or explosion could result. Pump, valves, and containers must be properly grounded when handling flammable fluids and whenever discharge of static electricity is a hazard.
- CAUTION: Do not exceed 8.6 bar (125 psig) air supply pressure. (3.4 bar [50 psig] on UL models.)
- CAUTION: Before any maintenance or repair is attempted, the compressed air line to the pump should be disconnected and all air pressure allowed to bleed from pump. Disconnect all intake, discharge and air lines. Drain the pump by turning it upside down and allowing any fluid to flow into a suitable container.


- **CAUTION:** Blow out air line for 10 to 20 seconds before attaching to pump to make sure all pipe line debris is clear. Use an in-line air filter. A 5μ (micron) air filter is recommended.
- NOTE: When installing PTFE diaphragms, it is important to tighten outer pistons simultaneously (turning in opposite directions) to ensure tight fit.
- **WARNING:** Tighten all clamp bands and retainers prior to installation. Fittings may loosen during transportation.
- NOTE: Before starting disassembly, mark a line from each liquid chamber to its corresponding air chamber. This line will assist in proper alignment during reassembly.
- **CAUTION:** Verify the chemical compatibility of the process and cleaning fluid to the pump's component materials in the Chemical Resistance Guide (see E4).
- **CAUTION:** When removing the end cap using compressed air, the air valve end cap may come out with considerable force. Hand protection such as a padded glove or rag should be used to capture the end cap.
- NOTE: All non lube-free air-operated pumps must be lubricated. Wilden suggests an arctic 5 weight oil (ISO grade 15). Do not over-lubricate pump. Over-lubrication will reduce pump performance.
- NOTE: UL-listed pumps must not exceed 3.4 bar (50 psig) air supply pressure.
- **CAUTION:** Only explosion proof (NEMA 7) solenoid valves should be used in areas where explosion proof equipment is required.
- **CAUTION:** Do not hang Stallion models by their handles.



WILDEN PUMP DESIGNATION SYSTEM

T15 ORIGINAL™ METAL

76 mm (3") Pump **Maximum Flow Rate:** 878 LPM (232 GPM)

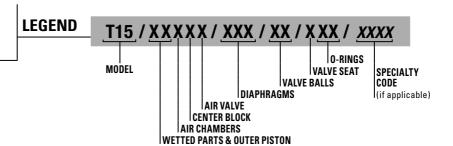

MATERIAL CODES

AIR SYSTEM BASE TYPE

= ACCU-FLO™ = TURBO-FLO™

WETTED PARTS & OUTER PISTON

= ALUMINUM / ALUMINUM SS = STAINLESS STEEL / STAINLESS STEEL

WW = CAST IRON / CAST IRON

AIR CHAMBERS

= ALUMINUM

= NICKEL PLATED ALUMINUM

= STAINLESS STEEL

= CAST IRON

CENTER BLOCK

= ALUMINUM

= NICKEL PLATED ALUMINUM

= POLYPROPYLENE

S = STAINLESS STEEL

AIR VALVE

= BRASS

= BRASS W/OIL BOTTLE

= NICKEL PLATED ALUMINUM

= STAINLESS STEEL

DIAPHRAGMS

XBS = CONDUCTIVE BUNA-N (Two

Red Dots)

BNS = BUNA-N (Red Dot)

FSS = SANIFLEXTM

[Hytrel® (Cream)] EPS = EPDM (Blue Dot)

NES = NEOPRENE (Green Dot)

PUS = POLYURETHANE (Clear)

TEU = PTFE W/EPDM

BACK-UP (White)

TNU = PTFE W/NEOPRENE BACK-UP (White)

TSU = PTFE W/SANIFLEX™ BACK-

UP (White)

BNU = BUNA-N, ULTRA-FLEX™

EPU = EPDM, ULTRA-FLEX™ NEU = NEOPRENE, ULTRA-FLEX™

VTU = VITON®, ULTRA-FLEX™

VTS = VITON® (White Dot)

WFS = WIL-FLEXTM [Santoprene®

(Orange Dot)]

VALVE BALL

BN = BUNA-N (Red Dot)

SANIFLEX™

[Hytrel® (Cream)]

= EPDM (Blue Dot) NE = NEOPRENE (Green Dot)

PU = POLYURETHANE (Brown)

TF = PTFE (White)

VT = VITON® (White Dot)

WF = WIL-FLEXTM [Santoprene®

(Orange Dot)]

VALVE SEAT

= ALUMINUM

BN = BUNA-N (Red Dot)

= SANIFLEX™

[Hytrel® (Cream)]

= ALLOY C Н

= MILD STEEL М

= EPDM (Blue Dot)

NE = NEOPRENE (Green Dot) = POLYURETHANE (Brown)

= STAINLESS STEEL

= VITON® (White Dot)

= WIL-FLEXTM [Santoprene®

(Orange Dot)]

*Valve seat o-ring required

VALVE SEAT O-RING

FS = FLUORO-SEAL™ = PTFE (White)

SPECIALTY CODES

- Spark free 0010 SS outer piston, spark free
- Spark free, BSP1 0015
- BSPT, unpainted Wing nuts 0023 0030
- Screen based Screen based, spark free 0033
- Screen based, BSPT
- Screen based, spark free, BSPT
- Screen based, polyurethane screen
- Stallion®, balls & seats ONLY Stallion®, shaft & bumpers ONLY
- Stallion®, internals, BSPT Stallion®, internals Stallion®, aluminum screen base
- Stallion® Stallion®, BSPT
- 0051
- Stallion®, spark free Stallion®, footed, BSPT
- Stallion® footed
- Stallion®, spark free, BSPT Saniflo™ FDA, w/vertical flange 0068
- Saniflo™ FDA, w/vertical flange, with stand

- Saniflo™ FDA, with stand
- 0076 Saniflo™ FDA Stallion® internals
- Tri-clamp fittings, wing nuts 0080 Tri-clamp fittings ONLY
- 0091 UL listed, Wil-Gard II™ 110V
- UL listed, screen based Wil-Gard II™ 110V 0092
- 0102 Wil-Gard II™, sensor wires ONLY
- Wil-Gard II™ 220V Wil-Gard II™ 110V, spark free 0104
- Wil-Gard II™ 220V, spark free Wil-Gard II™ 220V, BSPT 0105
- 0108 Wil-Gard II™ 220V, spark free, BSPT Stallion®, footed, spark free, without handles 0109
- Stallion®, internals, spark free, BSPT Stallion®, footed, spark free, BSPT,
- without handles Stallion®, BSPT, without handles
 Stallion®, FDA, Wil-Gard II™ 110V
 Saniflo™ FDA, Wil-Gard II™ 110V, with stand 0116
- 0120
- Accu-Flo™ 24V DC coil, Intl., PTB approved 0124
- Saniflo™, Accu-Flo™, 24V DC coil Saniflo™, Accu-Flo™, 24V DC x-proof coil

- Saniflo™, Accu-Flo™, 110V AC coil Saniflo™, Accu-Flo™, 24V AC / 12V DC coil Saniflo™, Accu-Flo™, 24V AC / 12V DC x-proof coil Saniflo™, Accu-Flo™, 110V AC x-proof coil Accu-Flo™, valve body ONLY, no coil, BSPT, discharge facing forward
- Accu-Flo™, 110V AC x-proof coil, BSPT Accu-Flo™, 110V AC coil, BSPT 0143
- 0145 Accu-Flo™, 110V AC x-proof coil, Wil-Gard II™
- Accu-Flo™, 24V DC coil, spark free, BSPT 0147 Accu-Flo™, valve body ONLY, no coil, BSPT Accu-Flo™, x-proof valve body ONLY,
- 0149
- no coil, BSPT Accu-Flo™, 24V DC coil Accu-Flo™, 24V AC / 12V DC coil Accu-Flo™, 24V AC / 12V DC coil,
- lube-free center section Accu-Flo™, 24V AC / 12V DC x-proof coil Accu-Flo™, 24V DC x-proof coil Accu-Flo™, 110V AC coil
- Accu-Flo™, 110V AC x-proof coil
 Accu-Flo™, 24V DC coil, Intl., PTB approved 0157
- Accu-Flo™, 24V DC coil, Intl., PTB approved, BSPT 0513 Accu-Flo™, 24V DC coil, BSPT


- Accu-Flo™, 24V DC x-proof coil, BSPT Accu-Flo™ 24V AC / 12V DC coil BSPT
- Accu-Flo™, 110V AC coil, Wil-Gard II™ sensor wires ONLY Accu-Flo™ 24V AC / 12V DC coil, Wil-Gard II™
- 0167 110V Accu-Flo™, 110V AC coil, Wil-Gard II™ 110V Accu-Flo™, 24V AC / 12V DC x-proof coil, Wil-Gard II™ 110V
- Wil-dard II[™] 11UV
 Accu-Flo™, 24V DC coil, spark free
 Accu-Flo™, 24V DC x-proof coil, spark free
 Accu-Flo™, 24V AC / 12V DC coil, spark free
 Accu-Flo™, 24V AC / 12V DC 0195
- x-proof coil, spark free
 Accu-Flo™, 110V AC coil, spark free
 Accu-Flo™, 110V AC x-proof coil, spark free
- 0231 Stallion®, externals (screen & handles) Stallion®, externals (screen & handles), BSPT
- No air valve Wing nuts, BSPT Accu-Flo™, 110V AC coil, Stallion®, internals
- (balls & seats ONLY)


0155

WILDEN

HOW IT WORKS—PUMP

The Wilden diaphragm pump is an air-operated, positive displacement, self-priming pump. These drawings show the flow pattern through the pump upon its initial stroke. It is assumed the pump has no fluid in it prior to its initial stroke.

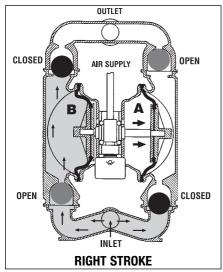

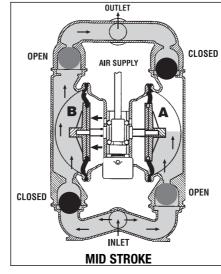

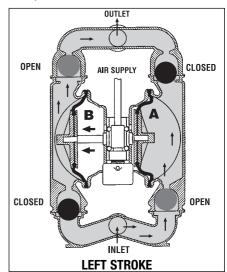


FIGURE 1 The air valve directs pressurized air to the back side of diaphragm A. The compressed air is applied directly to the liquid column separated by elastomeric diaphragms. The diaphragm acts as a separation membrane between the compressed air and liquid, balancing the load and removing mechanical stress from the diaphragm. The compressed air moves the diaphragm away from the center block of the pump. The opposite diaphragm is pulled in by the shaft connected to the pressurized diaphragm. Diaphragm B is on its suction stroke: air behind the diaphragm has been forced out to the atmosphere through the exhaust port of the pump. The movement of diaphragm B toward the center block of the pump creates a vacuum within chamber B. Atmospheric pressure forces fluid into the inlet manifold forcing the inlet valve ball off its seat. Liquid is free to move past the inlet valve ball and fill the liquid chamber (see shaded area).

FIGURE 2 When the pressurized diaphragm, diaphragm A, reaches the limit of its discharge stroke, the air valve redirects pressurized air to the back side of diaphragm B. The pressurized air forces diaphragm B away from the center block while pulling diaphragm A to the center block. Diaphragm B is now on its discharge stroke. Diaphragm B forces the inlet valve ball onto its seat due to the hydraulic forces developed in the liquid chamber and manifold of the pump. These same hydraulic forces lift the discharge valve ball off its seat, while the opposite discharge valve ball is forced onto its seat, forcing fluid to flow through the pump discharge. The movement of diaphragm A toward the center block of the pump creates a vacuum within liquid chamber A. Atmospheric pressure forces fluid into the inlet manifold of the pump. The inlet valve ball is forced off its seat allowing the fluid being pumped to fill the liquid chamber.


FIGURE 3 At completion of the stroke, the air valve again redirects air to the back side of diaphragm A, which starts diaphragm B on its exhaust stroke. As the pump reaches its original starting point, each diaphragm has gone through one exhaust and one discharge stroke. This constitutes one complete pumping cycle. The pump may take several cycles to completely prime depending on the conditions of the application.





DIMENSIONAL DRAWINGS

T15 Metal

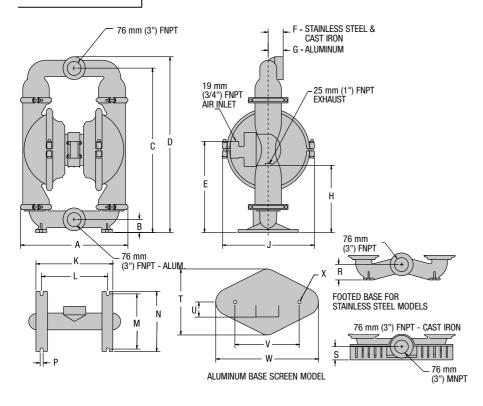


DIMENSIONS

ITEM	METRIC (mm)	STANDARD (inch)
Α	505	19.9
В	58	2.3
С	762	30.0
D	823	32.4
E	419	16.5
F	71	2.8
G	69	2.7
Н	312	12.3
J	427	16.8
K	361	14.2
L	305	12.0
M	259	10.2
N	282	11.1
Р	15	0.6
R	71	2.8
S	66	2.6
T	305	12.0
U	43	1.7
٧	305	12.0
W	478	18.8
Х	Ø15	Ø0.6

BSP threads available.

A15 Metal AccuFlo™

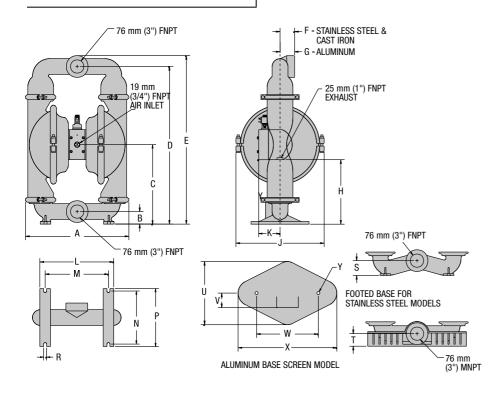


DIMENSIONS

ITEM	METRIC (mm)	STANDARD (inch)
Α	498	19.6
В	58	2.3
С	386	15.2
D	762	30.0
Ε	823	32.4
F	71	2.8
G	69	2.7
Н	312	12.3
J	427	16.8
K	102	4.0
L	361	14.2
M	305	12.0
N	359	10.2
Р	282	11.1
R	15	0.6
S	71	2.8
T	66	2.6
U	305	12.0
V	102	4.0
W	305	12.0
Χ	478	18.8
Υ	Ø15	Ø0.6




DIMENSIONAL DRAWINGS

T15 Metal Saniflo FDA

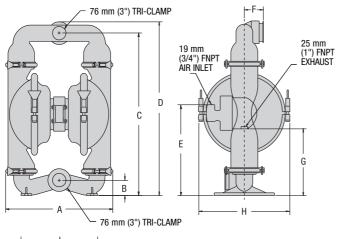


DIMENSIONS

ITEM	METRIC (mm)	STANDARD (inch)
Α	521	20.5
В	71	2.8
С	767	30.2
D	810	31.9
E	422	16.6
F	89	3.5
G	312	12.3
Н	432	17.0
J	356	14.0
K	305	12.0
L	277	10.9
M	279	11.0
N	15	0.6

 

Accu-Flo™ model available.

T15 Metal Stallion

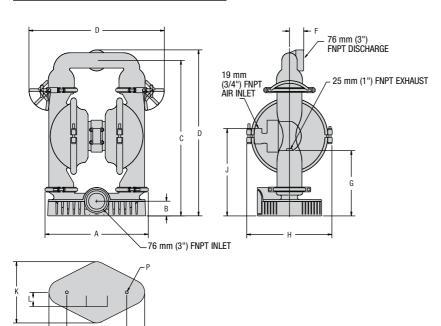

DIMENSIONS


ITEM	METRIC (mm)	STANDARD (inch)
Α	505	19.9
В	71	2.8
С	775	30.5
D	836	32.9
Ε	737	29.0
F	69	2.7
G	325	12.8
Н	427	16.8
J	432	17.0
K	310	12.2
L	43	1.7
М	305	12.0
N	480	18.9
Р	Ø15	Ø0.6

Height	810 mm (31.9")
	432 mm (17.0")
	279 mm (11.0")
	Cast Iron 91 kg (200 lbs)
31	6 Stainless Steel 79 kg (175 lbs)
	19 mm (3/4")
Inlet	76 mm (3")
	76 mm (3")
Suction Lift	5.5 m Dry (18')
	9.45 m Wet (31')
Displacement/Stro	ke 5.3 I (1.40 gal.) ¹
Max. Flow Rate	878 lpm (232 gpm)
Max. Size Solids	10 mm (3/8")
	troke was calculated at 4.8 bar essure against a 2 bar (30 psig)

head pressure. **Example:** To pump 530 lpm (140 gpm) against a discharge pressure head of 2.1 bar (30 psig) requires 4.1 bar (60 psig) and 136 Nm³/h (80

Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.

scfm) air consumption. (See dot on chart.)

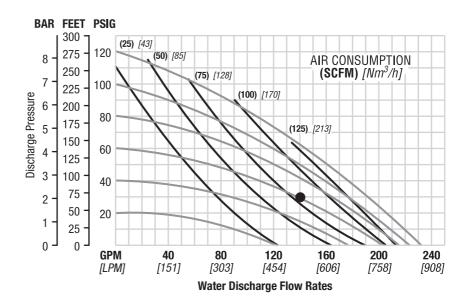

Flow rates indicated on chart were determined by pumping water.

For optimum life and performance, pumps should be specified so that daily operation parameters will fall in the center of the pump performance curve.

TURBO-FLO*


PERFORMANCE

Height	810 mm (31.9")
Width	432 mm (17.0")
Depth	279 mm (11.0")
Est. Ship Weigh	t Aluminum 53 kg (116 lbs)
	Cast Iron 91 kg (200 lbs)
	316 Stainless Steel 79 kg (175 lbs)
Air Inlet	19 mm (3/4")
Inlet	
Outlet	
Suction Lift	3.49 m Dry (13')
	8.53 m Wet (28')
Displacement/S	Stroke 5.4 I (1.43 gal.) ¹
Max. Flow Rate	845 lpm (223 gpm)
Max. Size Solid	s10 mm (3/8")
10: 1	

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2 bar (30 psig) head pressure.

Example: To pump 492 lpm (130 gpm) against a discharge pressure head of 2.1 bar (30 psig) requires 4.1 bar (60 psig) and 119 Nm³/h (70 scfm) air consumption. (See dot on chart.)

Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.

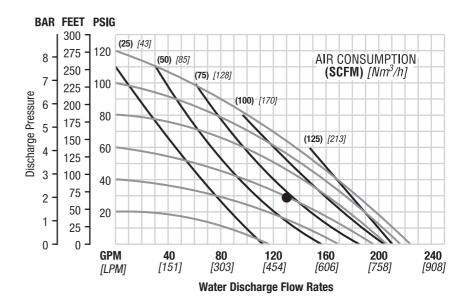

Flow rates indicated on chart were determined by pumping water.

For optimum life and performance, pumps should be specified so that daily operation parameters will fall in the center of the pump performance curve.


T15 METAL T E ITTE

Height	810 mm (31.9")
Width	432 mm (17.0")
Depth	279 mm (11.0")
Est. Ship Weight	Aluminum 51 kg (113 lbs)
	Stainless Steel 78 kg (173 lbs)
	Cast Iron 90 kg (198 lbs)
Air Inlet	13 mm (1/2")
Inlet	76 mm (3")
	76 mm (3")
Suction Lift	5.18 m Dry (17')
	9.14 m Wet (30')
	3.8 I (1.00 gal.) ¹
Max. Flow Rate	640 lpm (169 gpm)
Max. Size Solids	10 mm (3/8")

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2 bar (30 psig) head pressure.

Example: To pump 253 lpm (67 gpm) against a discharge pressure head of 2.7 bar (40 psig) requires 4.1 bar (60 psig), 76.5 Nm³/h (45 scfm) air consumption, and a pump speed of 90 strokes/ minute. (See dot on chart.)

Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.

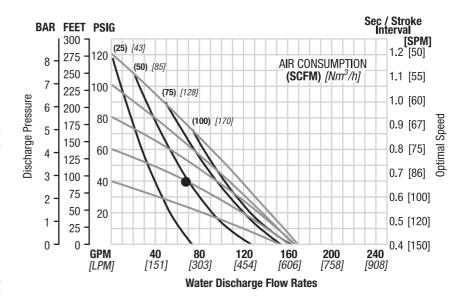


Flow curves are for "optimal speed" conditions only. The "optimal speed" is that speed which provides the maximum flow under a particular air and fluid pressure condition. The optimal speed varies for different fluid and air pressures. Recommendations for optimal speed can be found on the right side of the flow curve.

Flow rates indicated on chart were determined by pumping water.

For optimum life and performance, pumps should be specified so that daily operation parameters will fall in the center of the pump performance curve.



70/30 OPERATING CONDITION

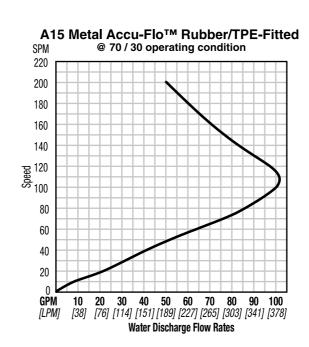





PERFORMANCE


A15 METAL T E T E ITTE

Width Depth	
	Stainless Steel 78 kg (173 lbs)
	Cast Iron 90 kg (198 lbs)
Air Inlet	13 mm (1/2")
Inlet	
Outlet	
Suction Lift	3.35 m Dry (11')
	9.14 m Wet (30')
Displacement/Stroke	e 2.35 I (0.62 gal.) ¹
Max. Flow Rate	481 lpm (127 gpm)
Max. Size Solids	10 mm (3/8")

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2 bar (30 psig) head pressure.

Example: To pump 208 lpm (55 gpm) against a discharge pressure head of 2.7 bar (40 psig) requires 4.1 bar (60 psig), 102 Nm³/h (60 scfm) air consumption and a pump speed of 90 strokes/minute. (See dot on chart.)

Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.

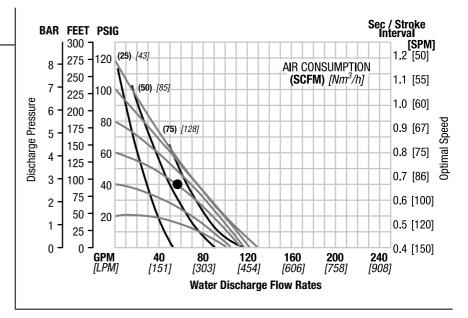

Flow curves are for "optimal speed" conditions only. The "optimal speed" is that speed which provides the maximum flow under a particular air and fluid pressure condition. The optimal speed varies for different fluid and air pressures. Recommendations for optimal speed can be found on the right side of the flow curve.

Flow rates indicated on chart were determined by pumping water.


For optimum life and performance, pumps should be specified so that daily operation parameters will fall in the center of the pump performance curve.



70/30 OPERATING CONDITION

A15 METAL T E T E ITTE

This curve demonstrates the flow created when the stroke rate is modified under a static air and fluid pressure condition. This curve can be applied to different pressure conditions to estimate the change in flow due to stroke rate.

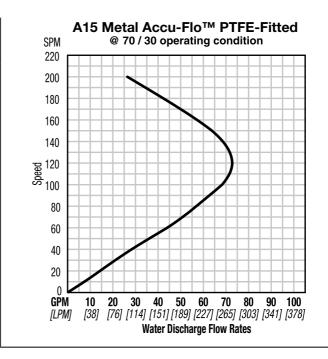


T15 METAL E ITTE

Height	810 mm (31.9")
Width	432 mm (17.0")
Depth	279 mm (11.0")
Est. Ship Weight	Aluminum 57 kg (125 lbs)
Air Inlet	19 mm (3/4")
Inlet	76 mm (3")
Outlet	76 mm (3")
Suction Lift	3.49 m' Dry (13)
	7.62 m Wet (25')
Displacement/Stroke.	2.5 I (0.66 gal.) ¹
Max. Flow Rate	693 lpm (183 gpm)
Max. Size Solids	25 mm (1")

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2 bar (30 psig) head pressure.

Example: To pump 132 lpm (95 gpm) against a discharge pressure head of 2.1 bar (30 psig) requires 4.1 bar (60 psig) and 127 Nm³/h (75 scfm) air consumption. (See dot on chart.)

Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.

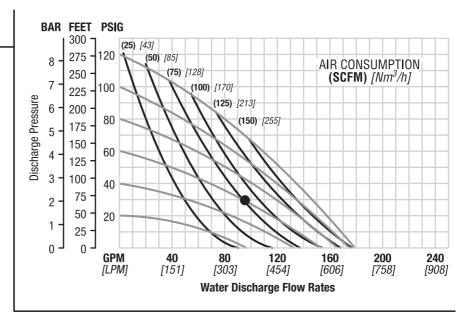

Flow rates indicated on chart were determined by pumping water.


For optimum life and performance, pumps should be specified so that daily operation parameters will fall in the center of the pump performance curve.



SUCTION LIFT CURVE

T15 METAL SUCTION LIFT CAPABILITY

Suction lift curves are calibrated for pumps operating at 305 m (1,000') above sea level. This chart is meant to be a guide only. There are many variables which can affect your pump's operating characteristics. The number of intake and discharge elbows, viscosity of pumping fluid, elevation (atmospheric pressure) and pipe friction loss all affect the amount of suction lift your pump will attain.

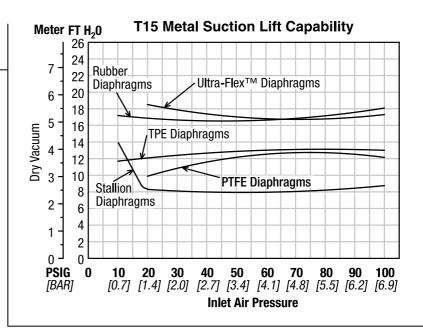


ACCUFLO SELECTION OF THE SECOND OF THE SECON

SUCTION LIFT CURVE

A15 METAL SUCTION LIFT CAPABILITY

Suction lift curves are calibrated for pumps operating at 305 m (1,000') above sea level. This chart is meant to be a guide only. There are many variables which can affect your pump's operating characteristics. The number of intake and discharge elbows, viscosity of pumping fluid, elevation (atmospheric pressure) and pipe friction loss all affect the amount of suction lift your pump will attain.

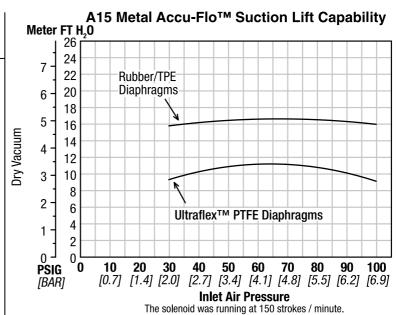

Actual suction lift may vary with different pump speeds.





SUGGESTED INSTALLATION

The Model T15 Metal pump has a 76 mm (3") inlet and 76 mm (3") outlet and is designed for flows to 878 lpm (232 gpm). The T15 Metal pump is manufactured with wetted parts of aluminum, cast iron or 316 Stainless Steel. The center block of the T15 Metal is constructed of glass-filled polypropylene, aluminum, nickel-plated aluminum, PTFE-coated aluminum or 316 Stainless Steel. A variety of diaphragms, valve balls, and o-rings are available to satisfy temperature, chemical compatibility, abrasion and flex concerns.

The suction pipe size should be at least 76 mm (3") diameter or larger if highly viscous material is being pumped. The suction hose must be non-collapsible, reinforced type as the T15 is capable of pulling a high vacuum. Discharge piping should be at least 76 mm (3"); larger diameter can be used to reduce friction losses. It is critical that all fittings and connections are airtight or a reduction or loss of pump suction capability will result.

INSTALLATION: Months of careful planning, study, and selection efforts can result in unsatisfactory pump performance if installation details are left to chance.

Premature failure and long term dissatisfaction can be avoided if reasonable care is exercised throughout the installation process.

LOCATION: Noise, safety, and other logistical factors usually dictate that "utility" equipment be situated away from the production floor. Multiple installations with conflicting requirements can result in congestion of utility areas, leaving few choices for siting of additional pumps.

Within the framework of these and other existing conditions, every pump should be located in such a way that five key factors are balanced against each other to maximum advantage.

ACCESS: First of all, the location should be accessible. If it's easy to reach the pump, maintenance personnel will have an easier time carrying out routine inspections and adjustments. Should major repairs become necessary, ease of access can play a key role in speeding the repair process and reducing total downtime.

AIR SUPPLY: Every pump location should have an air line large enough to supply the volume of air necessary to achieve the desired pumping rate (see Section 5). Use air pressure up to a maximum of 8.6 bar (125 psig) depending upon pumping requirements.

For best results, the pumps should use a 5 micron air filter, needle valve and regulator. The use of an air filter before the pump will insure that the majority of any pipeline contaminants will be eliminated.

SOLENOID OPERATION: When operation is controlled by a solenoid valve in the air line, three-way valves should be used, thus allowing trapped air to bleed off and improving pump performance. Pumping volume can be set by counting the number of strokes per minute and multiplying by displacement per stroke.

MUFFLER: Sound levels are reduced below OSHA specifications using the standard Wilden muffler element. Other mufflers can be used to further reduce sound levels, but they usually reduce pump performance.

ELEVATION: Selecting a site that is well within the pump's dynamic lift capability will assure that loss-of-prime troubles will be eliminated. In addition, pump efficiency can be adversely affected if proper attention is not given to elevation (see Section 5).

PIPING: Final determination of the pump site should not be made until the piping problems of each possible location have been evaluated. The impact of current and future installations should be considered ahead of time to make sure that inadvertent restrictions are not created for any remaining sites.

The best choice possible will be a site involving the shortest and the straightest hook-up of suction and discharge piping. Unnecessary elbows, bends, and fittings should be avoided. Pipe sizes should be selected so as to keep friction losses within practical limits. All piping should be supported independently of the pump. In addition, the piping should be aligned so as to avoid placing stresses on the pump fittings.

Expansion joints can be installed to aid in absorbing the forces created by the natural reciprocating action of the pump. If the pump is to be bolted down to a solid foundation, a mounting pad placed between the pump and foundation will assist in minimizing pump vibration. Flexible connections between the pump and rigid piping will also assist in minimizing pump vibration. If quick-closing valves are installed at any point in the discharge system, or if pulsation within a system becomes a problem, a surge suppressor should be installed to protect the pump, piping and gauges from surges and water hammer.

When pumps are installed in applications involving flooded suction or suction head pressures, a gate valve should be installed in the suction line to permit closing of the line for pump service.

The T15 can be used in submersible applications only when both wetted and non-wetted portions are compatible with the material being pumped. If the pump is to be used in a submersible application, a hose should be attached to the pump's air exhaust and the exhaust air piped above the liquid level.

If the pump is to be used in a self-priming application, be sure that all connections are airtight and that suction lift is within the pump's ability. Note: Materials of construction and elastomer material have an effect on suction lift parameters. Please refer to Section 6.

Pumps in service with a positive suction head are most efficient when inlet pressure is limited to 0.5–0.7 bar (7–10 psig). Premature diaphragm failure may occur if positive suction is 0.8 bar (11 psig) and higher.

THE MODEL T15 WILL PASS 10 mm (3/8") SOLIDS. THE T15 STALLION WILL PASS 25 mm (1") SOLIDS. WHENEVER THE POSSIBILITY EXISTS THAT LARGER SOLID OBJECTS MAY BE SUCKED INTO THE PUMP, A STRAINER SHOULD BE USED ON THE SUCTION LINE.

CAUTION: DO NOT EXCEED 8.6 BAR (125 PSIG) AIR SUPPLY PRESSURE. (3.4 BAR [50 PSIG] FOR UL MODELS.)

PUMPS SHOULD BE THOROUGHLY FLUSHED WITH WATER BEFORE INSTALLING INTO PROCESS LINES. FDA AND USDA PUMPS SHOULD BE CLEANED AND/OR SANITIZED BEFORE USE ON EDIBLE PRODUCTS.


BLOW OUT AIR LINE FOR 10 TO 20 SECONDS BEFORE ATTACHING TO PUMP TO MAKE SURE ALL PIPE LINE DEBRIS IS CLEAR. ALWAYS USE AN IN-LINE AIR FILTER.

CAUTION: DO NOT HANG T15 STALLION PUMPS BY THEIR HANDLES.





SUGGESTED INSTALLATION

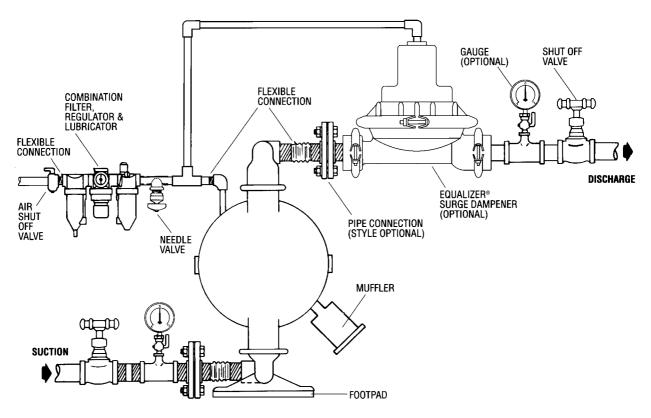

NOTE: In the event of a power failure, the shutoff valve should be closed, if the restarting of the pump is not desirable once power is regained.

AIR OPERATED PUMPS: To stop the pump from operating in an emergency situation, simply close the "shut-off" valve (user supplied) installed in the air supply line. A properly functioning valve will stop the air supply to the pump, therefore stopping output. This shut-off valve should be located far enough away from the pumping equipment such that it can be reached safely

in an emergency situation.

ACCU-FLO™ PUMPS: Accu-Flo™ pumps function with solenoid valves and require an electrical control circuit to supply pulses. Under normal operating conditions, the control circuit is sufficient for starting and stopping the pump. However, the shut-off valve (user supplied) installed in the air supply line can be used to stop the pump if necessary. Therefore, it should be located far enough away from the pumping equipment such that it can be reached safely in an emergency situation.

SUGGESTED OPERATION & MAINTENANCE

OPERATION: Pump discharge rate can be controlled by limiting the volume and/or pressure of the air supply to the pump (preferred method). An air regulator is used to regulate air pressure. A needle valve is used to regulate volume. Pump discharge rate can also be controlled by throttling the pump discharge by partially closing a valve in the discharge line of the pump. This action increases friction loss which reduces flow rate. This is useful when the need exists to control the pump from a remote location. When the pump discharge pressure equals or exceeds the air supply pressure, the pump will stop; no bypass or pressure relief valve is needed, and pump damage will not occur. The pump has reached a "deadhead" situation and can be restarted by reducing the fluid discharge pressure or increasing the air inlet pressure. The Wilden T15 pump runs solely on compressed air and does not generate heat, therefore your process fluid temperature will not be affected.

RECORDS: When service is required, a record should be made of all necessary repairs and replacements. Over a period of time, such records can become a valuable tool for predicting and preventing future maintenance problems and unscheduled downtime. In addition, accurate records make it possible to identify pumps that are poorly suited to their applications.

MAINTENANCE AND INSPECTIONS: Since each application is unique, maintenance schedules may be different for every pump. Frequency of use, line pressure, viscosity and abrasiveness of process fluid all affect the parts life of a Wilden pump. Periodic inspections have been found to offer the best means for preventing unscheduled pump downtime. Personnel familiar with the pump's construction and service should be informed of any abnormalities that are detected during operation.





OPERATING PRINCIPLES

In Accu-Flo™ pump models, the standard air valve is replaced with a two position, four-way solenoid valve that has a single operator and spring return. The valve is internally air piloted for longer coil and operator life.

When the solenoid is unpowered, one air chamber is pressurized with air, while the opposite chamber is exhausted. When electric power is applied, the solenoid shifts, and the pressurized air chamber is exhausted while the opposite chamber is pressurized. By alternately applying and removing power, the solenoid-operated pump runs like a standard Wilden pump.

The speed of the pump is controlled electrically. Since each stroke is controlled by an electrical signal, the pump is ideal for batching and other electrically controlled dispensing applications.

Although the speed of the pump is controlled electrically, the air pressure is important. Air pressure displaces the fluid, and if the pressure is insufficient to complete the physical stroke before an electronic impulse signals the pump to shift, the stroke will not be completed, and the displacement per stroke will be reduced. This does not harm the unit in any way, but it may cause inaccuracy when attempting to batch specific quantities with high precision if this effect is not taken into account.

There are three coil voltage options available. One coil allows for 24V DC operation. The second coil option allows for operation with either 12V DC or 24V AC at 60 Hz and the third coil option allows for 110V AC operation.



INSTALLATION - A15 METAL

Before installing your A15 Accu-Flo™ pump, review Section 7A for general installation suggestions including Location, Access, Air Supply, Elevation, and Piping.

The Accu-Flo™ Model A15 has a 76 mm (3") inlet and 76 mm (3") outlet and is designed for flows to 878 lpm (232 gpm). This maximum flow rate was calculated at 300 strokes per minute with 100 psig air inlet against 0 psig discharge head. The A15 Metal pump is manufactured with wetted parts of aluminum, cast iron, or 316 stainless steel. The center block of the A15 Metal pump is of polypropylene, aluminum, nickel-plated aluminum, PTFE-coated aluminum or 316 stainless steel construction. A variety of diaphragms, valve balls, and o-rings are available to satisfy temperature, chemical compatibility, abrasion and flex concerns.

All wiring used to operate the pump should be placed and connected according to the proper electrical codes. It is important that the wiring is of adequate gauge to carry the current required to operate the pump. In addition, it is necessary that the electrical power supply is large enough to supply the current required to operate the pump. Wiring should be above ground level if possible (in case of fluid spill or leakage), and all wiring and connections which could become wet or damp should be made watertight.

If the pump is to be used in a self-priming application, be sure that all connections are airtight and that the suction lift is within the pump's ability. Note: Materials of construction and elastomer material have an effect on suction lift parameters. Please refer to pump performance data.

Pumps in service with a positive suction head are most efficient when inlet pressure is limited to 0.5–0.7 bar (7–10 psig). Premature diaphragm failure may occur if positive suction head is 0.8 bar (11 psig) and higher.

The solenoid valve is rated for continuous duty; however, stopping on an even number stroke count insures that the electrical power is off when pump is stopped. This practice is safer and also eliminates unwanted strokes when the system is shut down and electrical power is off.

THE MODEL A15 WILL PASS 10 mm (3/8") SOLIDS. STALLION PUMPS WILL PASS 25 mm (1") SOLIDS. WHENEVER THE POSSIBILITY EXISTS THAT LARGER SOLID OBJECTS MAY BE SUCKED INTO THE PUMP, A STRAINER SHOULD BE USED ON THE SUCTION LINE.

WARNING: Before installation, consult chart in Section 10B to ensure proper electrical connection.

WARNING: The solenoid valve should not be used in an area where explosion proof equipment is required unless NEMA 7 valve is specified.


There are three coil options available in both NEMA 4 and NEMA 7 ratings. One coil allows for 110V AC operation, one allows for 24V DC operation, and the third allows for either 24V AC or 12V DC operation. See Section 10B for options and part numbers.

For additional solenoid information, consult Section 10C.






SUGGESTED OPERATION & MAINTENANCE

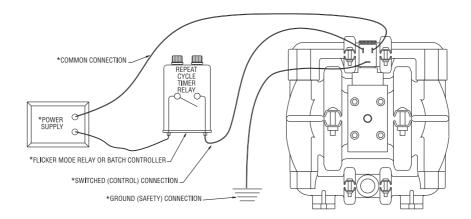



PLUMBING CONNECTIONS

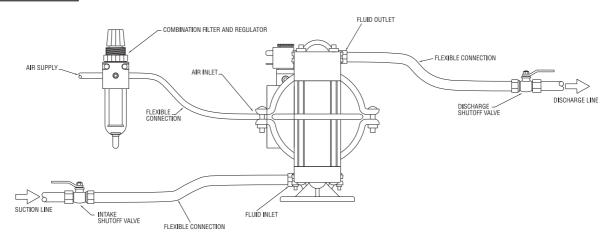



SUGGESTED OPERATION & MAINTENANCE

OPERATION: The speed of the pump is controlled electrically. Since each stroke is controlled by an electrical signal, the pump is ideal for batching and other electrically controlled dispensing applications.

Although the speed of the pump is controlled electrically, the air pressure is important. Air pressure displaces the fluid, and if the pressure is insufficient to complete the physical stroke before an electronic impulse signals the pump to shift, the stroke will not be completed, and the displacement per stroke will be reduced. This does not harm the unit in any way, but it may cause inaccuracy when attempting to batch specific quantities with high precision.

The solenoid operated pump is permanently lubricated during assembly, and requires no additional lubrication under normal operation. If the unit runs under extreme conditions (continuous operation at high speeds), it may be necessary to relubricate the center block with a **Buna-N compatible NLGI Grade 2 grease** every 50 million cycles. Continuous lubrication with a compatible oil is not harmful, and will provide longer seal life, but it may flush all grease out of the unit.

A red button on the side of the air valve is a manual override; when actuated it will shift the valve as if an electric current had actuated the solenoid.

RECORDS: When service is required, a record should be made of all necessary repairs and replacements. Over a period of time, such records can become a valuable tool for predicting and preventing future maintenance problems and unscheduled downtime. In addition, accurate records make it possible to identify pumps that are poorly suited to their applications.

MAINTENANCE AND INSPECTIONS: Since each application is unique, maintenance schedules may be different for every pump. Frequency of use, line pressure, viscosity and abrasiveness of process fluid all affect the parts life of a Wilden pump. Periodic inspections have been found to offer the best means for preventing unscheduled pump downtime. Personnel familiar with the pump's construction and service should be informed of any abnormalities that are detected during operation. Internal maintenance is not recommended for Accu-Flo™ solenoid air valves. When worn or damaged, a new air valve body, coil or terminal connector must be purchased. Please consult section 9C for part numbers.





TROUBLESHOOTING - AIR CONTROLLED

Pump will not run or runs slowly.

- Check air inlet screen and air filter for debris.
- 2. Check for sticking air valve, flush air valve in solvent.
- Check for worn out air valve. If piston face in air valve is shiny instead of dull, air valve is probably worn beyond working tolerances and must be replaced.
- Check center block Glyd[™] rings. If worn excessively, they will not seal and air will simply flow through pump and out air exhaust. Use only Wilden Glyd[™] rings as they are of special construction.
- 5. Check for rotating piston in air valve.
- Check type of lubricant being used. A higher viscosity oil than suggested may cause the piston to stick or run erratically. Wilden suggests the use of an oil with arctic characteristics (ISO 15-5 wt.).

Pump runs but little or no product flows.

- Check for pump cavitation; slow pump speed down to match thickness of material being pumped.
- Check for sticking ball check valves. If material being pumped is not compatible with pump elastomers, swelling may occur. Replace ball check valves and o-rings with the proper elastomers.

Check to make sure all suction connections are air tight, especially clamp bands around intake balls.

Pump air valve freezes.

Check for excessive moisture in compressed air. Either install dryer or hot air generator for compressed air.

Air bubbles in pump discharge.

- 1. Check for ruptured diaphragm.
- Check tightness of clamp bands, especially at intake manifold.

Product comes out air exhaust.

- Check for diaphragm rupture.
- Check tightness of piston plates to shaft.

Pump rattles.

- See E9 Troubleshooting Guide.
- 2. Create false discharge head or suction lift.



TROUBLESHOOTING

Pump will not run.

- Check for pressurized air at the inlet. (Min. 3.1 bar [45 psig.)
- 2. Check air inlet and filter for debris.
- 3. Connect a test lamp to the two wires which run to pump and ensure that the lamp cycles on and off.
- 4. Make sure that the air valve manual override (small red knob on front of valve) is switched to the "0" position.
- Check pilot pressure vent at the top of the operator/coil assembly to ensure that it is not cloqued.
- Check for a worn out air valve. If air continually blows out the exhaust in very large quantities, the air valve seals may be worn beyond their ability to function. In this case, the valve must be replaced.
 - NOTE: Before the valve is scrapped, it is possible that it may be saved by completely disassembling the valve, cleaning all components and relubricating the valve.

Pump runs but little or no fluid comes out.

- 1. Check that the discharge isolation valve is not closed.
- 2. Check that the electronic signal is slow enough that the pump is able to complete each physical stroke before it is signaled to change direction. The time required to complete the stroke is determined by a variety of factors which include fluid viscosity and head pressure. The shaft can be viewed if the muffler is removed to verify that the pump is stroking.
- Check for pump cavitation; slow pump speed down to match the thickness of the material being pumped.
- Check for sticking ball check valves. If the material being pumped is not compatible with the pump elastomers, swelling may occur. Replace ball check valves and o-ring with the proper elastomers.
- Check to make sure that all suction connections are air tight, and that the clamp bands are properly tightened.

Pump air passages blocked with ice.

Check for excessive moisture in compressed air line. As the air expands out the exhaust during the operation of the pump, water vapor entrapped in the compressed air can freeze and block the air passageways in the pump. If this occurs, it may be necessary to install a coalescing filter, an air dryer, or a hot air generator for the compressed air.

Air bubbles in pump discharge.

- 1. Check for ruptured diaphragm.
- Check tightness of clamp bands, and the integrity of the o-rings, especially at intake manifold.

Product comes out air exhaust.

- Check for diaphragm rupture.
- 2. Check tightness of piston plates to shaft.

Pump rattles.

- 1. See E9 Troubleshooting Guide.
- 2. Create false discharge head or suction lift.

Solenoid buzzes or solenoid burnout.

Incorrect voltage, faulty or dirty solenoid.

Solenoid valve fails to shift electrically but shifts with manual override.

Incorrect voltage, defective coil or wiring.

Solenoid valve fails to shift electrically or with manual override.

1. Inadequate air supply, contamination, inadequate or improper lubrication, mechanical binding in the valve.

Valve shifts but fails to return.

1. Broken spring, mechanical binding.

Excessive leaking from air valve vent.

1. Worn seals in air valve.

TURBO-FLO

WILDEN

DISASSEMBLY/REASSEMBLY


CAUTION: Before any maintenance or repair is attempted, the compressed air line to the pump should be disconnected and all air pressure allowed to bleed from the pump. Disconnect all intake, discharge, and air lines. Drain the pump by turning it upside down and allowing any fluid to flow into a suitable container. Be aware of any hazardous effects of contact with your process fluid.

The Wilden T15 has a 76 mm (3") inlet and 76 mm (3") outlet and is designed for flows up to 878 lpm (232 gpm). The T15 is available in aluminum, cast iron or 316 stainless steel wetted parts. The center block is available in polypropylene, aluminum, nickel-plated aluminum, and 316 stainless steel. Air valves come in brass, nickel-plated brass or 316 stainless steel. A variety of diaphragms, valve balls, valve seats and o-rings are available to satisfy temperature, chemical compatibility, abrasion and flex concerns. All o-rings used in the pump are of a special material and shore hardness that should only be replaced with factory-supplied parts.


TOOLS REQUIRED:

Adjustable Wrench
11/16" Box Socket
3/4" Box Wrench
3/4" Socket
Adjustable Wrench
Vise equipped with soft jaws (such as plywood, plastic or other suitable material)

NOTE: The model used for these instructions incorporates rubber diaphragms, balls, and seats. Models with PTFE diaphragms, balls and seats are the same except where noted. The procedures for A15 Accu-Flo™ pumps are the same except for the air distribution system.

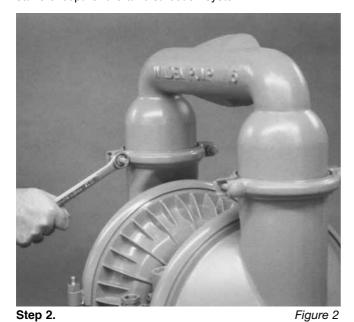

Utilizing the 11/16" box wrench, remove the two small clamp bands that fasten the discharge manifold to the liquid chambers.

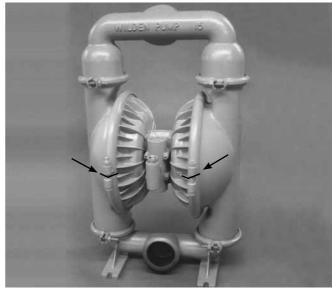


DISASSEMBLY:

Figure 1

Step 1.

Before starting disassembly, mark a line from each liquid chamber to its corresponding air chamber. This line will assist in proper alignment during reassembly.

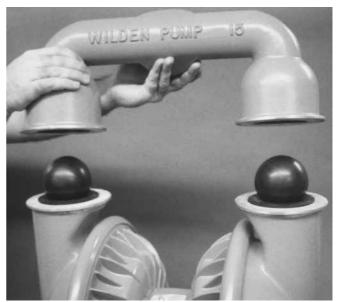


Step 3. Figure 3

Remove the discharge manifold to expose the valve balls and seats. Inspect the ball cage area of the manifold for excessive wear or damage. Remove the discharge valve balls, seats and o-rings from the discharge manifold and inspect for nicks, gouges, chemical attack or abrasive wear. Replace worn parts with genuine Wilden parts for reliable performance. PTFE o-rings should be replaced when reassembled.




TURBO-FLO

DISASSEMBLY/REASSEMBLY

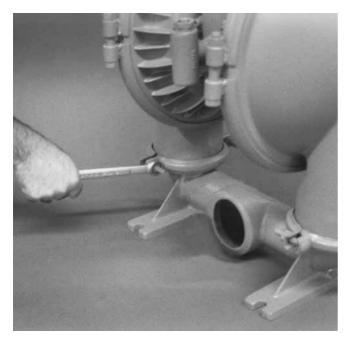




Remove the two small clamp bands that fasten the intake manifold to the liquid chambers.

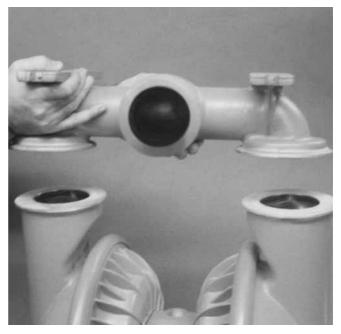

Step 5. Figure 5

Lift the intake manifold away to expose the valve balls and seats. Inspect intake valve ball cage for excessive wear or damage. Remove the intake valve balls, seats and o-rings from the discharge manifold and inspect for nicks, gouges, chemical attack or abrasive wear. Replace worn parts with genuine Wilden parts for reliable performance. PTFE o-rings should be replaced when reassembled.

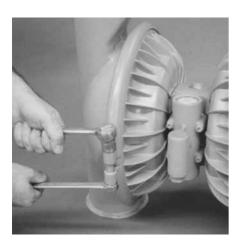

Step 6. Figure 6

With 3/4" socket and 3/4" box wrench, remove one set of large clamp bands that attach liquid chamber to center section assembly.



Step 7. Figure 7

Lift liquid chamber away from center section to expose diaphragm and outer piston.



Step 8. Figure 8

Using an adjustable wrench, or by rotating the diaphragm by hand, remove the diaphragm assembly.

DISASSEMBLY/REASSEMBLY




Step 9A. Figure 9A

NOTE: Due to varying torque values, one of the following two conditions may occur: 1) The outer piston, diaphragm and inner piston remain attached to the shaft and the entire assembly can be removed from the center section.



Step 9B. Figure 9B

2) The outer piston, diaphragm, and inner piston separate from the shaft which remains connected to the opposite side diaphragm assembly. Repeat disassembly instructions for opposite liquid chamber. Inspect diaphragm assembly and shaft for signs of wear or chemical attack. Replace all worn parts with genuine Wilden parts for reliable performance.

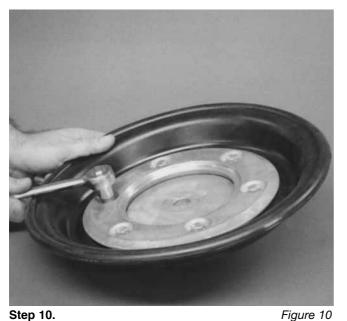

Step 10. Tigure 10

Use a socket wrench to disassemble the diaphragm assembly if replacement is necessary.



Step 11. Figure 11

To remove diaphragm assembly from shaft, secure shaft with soft jaws (a vise fitted with plywood, plastic, or other suitable material) to ensure shaft is not nicked, scratched or gouged. Using an adjustable wrench, remove diaphragm assembly from shaft.





AIR VALVE / CENTER BLOCK DISASSEMBLY


The air valve assembly consists of both the air valve body and piston and the center block. The unique design of the air valve relies only on differential pressure to effect the diaphragm shift. It is reliable and simple to maintain. The bushing in the center block, along with the diaphragm shaft, provides the "trigger" to tell the air valve to shift. The following procedure will ensure that the air valve on your Wilden pump will provide long trouble-free service.

AIR VALVE BODY AND PISTON ASSEMBLY AND DISASSEMBLY:

The air valve body and piston can be disconnected from the pump by removing the four socket head cap screws which attach it to the center block. The piston in the air valve is aluminum with a dark gray anodized coating. The piston should move freely and the ports in the piston should line up with the ports on the face of the air valve body (see below). The piston should also appear to be a dull, dark gray in color. If the piston appears to be a shiny aluminum color, the air valve is probably worn beyond working tolerance and should be replaced.

If the piston does not move freely in the air valve, the entire air valve should be immersed in a cleaning solution.

NOTE: Do not force the piston by inserting a metal object. This soaking should remove any accumulation of sludge and grit which is preventing the air valve piston from moving freely. Also, remove and clean the air valve screen. If the air valve piston does not move freely after the above cleaning, the air valve should be disassembled as follows: remove the snap ring from the top end of the air valve cylinder and apply an air jet to the 3/16-inch hole on the opposite end of the air valve face. (See Figure C.) **CAUTION:** The air valve end cap may come out with considerable force. Hand protection such as a padded glove or rag should be used to capture the end cap.

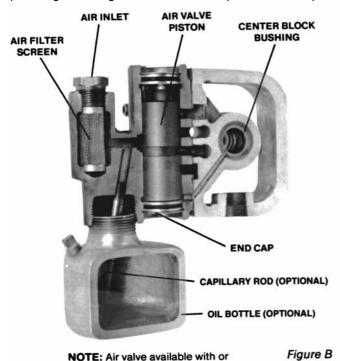

without oil bottle and capillary rod.



Figure C

 


Figure D





AIR VALVE / CENTER BLOCK DISASSEMBLY

Small nicks can usually be dressed out and the piston returned to service. Make sure that the guide pin is straight and smooth or the piston will not move freely in the cylinder. Clean out anti-centering pin holes located at each side of the piston. Pin holes are located on each side of the annular groove on the top of the piston and travel to each end. New o-rings should be installed on the end caps. Lubricate the o-rings and install the end caps, assuring that proper alignment of the piston and cylinder ports is maintained. (See Figure D). Reinstall air valve to center block of pump. Tighten per the torque specifications in Section 8E.

GLYD™ RING REPLACEMENT:

When the Glyd[™] rings become worn, they will no longer seal and must be replaced. Due to the design characteristics of the Glyd[™] rings, it is suggested that you use the Ringer Seal installation kit when replacing Glyd[™] rings (P/N 15-9341-99). Consult EOM-Ringer for installation instructions.

CENTER BLOCK ASSEMBLY:

The pump's center block consists of a polypropylene or die cast housing with a cast-in bronze bushing. The bushing has eleven grooves cut on the inside diameter. There are seven $Glyd^{TM}$ rings that fit in these grooves (see Figure E). Since these $Glyd^{TM}$ rings form a part of the shifting function of the pump, it is necessary that they be located in the proper grooves. The bronze bushing is replaceable in cast iron or stainless steel center blocks only. When bushing wear becomes excessive, a new center block must be used.


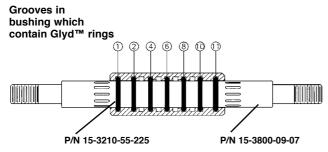


Figure E



Figure F (Side View)

P/N 15-3300-07 Bronze Bushing can be pressed into a stainless steel or cast iron center section. (See Figure F). When installing a new bushing, four bleeder holes which allow the pump to exhaust air must be drilled. A 7/32" drill should be used. (See Figure G).

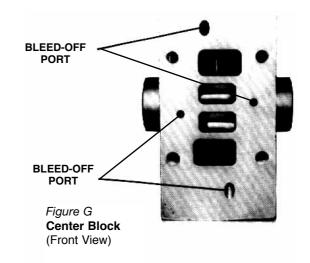






REASSEMBLY HINTS & TIPS

ASSEMBLY:

Upon performing applicable maintenance to the air distribution system, the pump can now be reassembled. Please refer to the disassembly instructions for photos and parts placement. To reassemble the pump, follow the disassembly instructions in reverse order. The air distribution system needs to be assembled first, then the diaphragms and finally the wetted path. Failure to replace worn parts with genuine Wilden parts will nullify any warranty offered by Wilden Pump & Engineering, LLC. Please find the applicable torque specifications on this page. The following tips will assist in the assembly process.

- Clean the inside of the center section shaft bushing to ensure no damage is done to new seals.
- Stainless bolts should be lubed to reduce the possibility of seizing during tightening.
- Level the water chamber side of the intake/discharge manifolds to ensure a proper sealing surface. This is most easily accomplished by placing them on a flat surface prior to tightening their clamp bands to the desired torque. (See this page for torque specifications.)
- Be sure to tighten outer pistons simultaneously on PTFEfitted pumps to ensure proper torque values.
- Place one liquid chamber on its side and align center section with chamber using alignment marks made during disassembly before tightening large clamp bands. Push down on opposite side diaphragm assembly until diaphragm is inverted. Place opposite liquid chamber on center section and align.

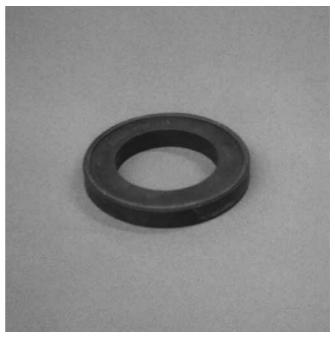


When reinstalling elastomeric valve seats, make sure the beveled surface mates with the manifold for proper sealing characteristics.

MAXIMUM TORQUE SPECIFICATIONS


Description of Part	Metal Pumps
Air Valve	9.0 N•m (80 in-lbs)
Outer Piston	135.6 N•m (100 ft-lbs)
Small Clamp Band (PTFE-fitted))	15.5 N•m (137 in-lbs)
Small Clamp Band (Rubber-fitted))	5.6 N•m (50 in-lbs)
Large Clamp Band (All)	47.4 N•m (35 ft-lbs)
Air Chambers	27.1 N•m (20 ft-lbs)
Center Block Assembly	27.1 N•m (20 ft-lbs)
2C-Ring Inner Piston	18.9 N•m (14 ft-lbs)
Metal Screen & Inlet Cover	9.0 N•m (80 in-lbs)
Polyurethane Screen & Inlet Cover	2.3 N•m (20 in-lbs)
Stallion Handles	40.7 N•m (30 ft-lbs)

EXPLODED VIEW (RUBBER DIAPHRAGMS)

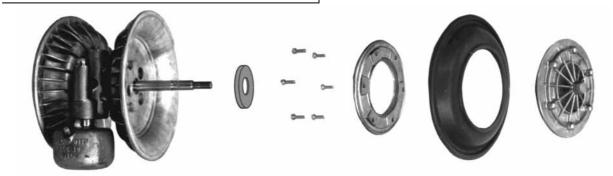

Inner piston ring maximum torque rating: refer to Section 8D.

EXPLODED VIEW (PTFE DIAPHRAGMS)

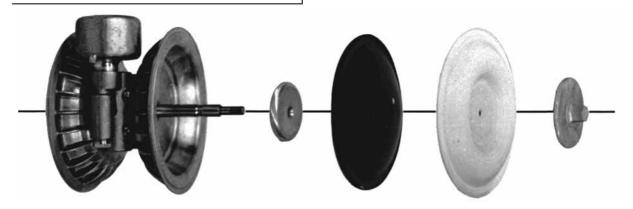

TURBO-FLO

GASKET KIT INSTALLATION

Only aluminum and cast iron pumps come standard with expanded PTFE Gasket Kits (P/N 15-9500-99). Carefully prepare sealing surfaces by removing all debris and foreign matter from diaphragm bead and all mating surfaces. If neces-

sary, smooth or deburr all sealing surfaces. Mating surfaces must be properly aligned in order to ensure positive sealing characteristics.



Step 1. Figure 1

Gently remove the adhesive covering from the back of the PTFE tape. Ensure that the adhesive strip remains attached to the PTFE tape.



Step 2. Figure 2

Starting at any point, place the PTFE tape in the center of the diaphragm bead groove on the liquid chamber and press lightly on the tape to ensure that the adhesive holds it in place during assembly. Do not stretch the tape during placement in center of diaphragm bead groove.



Step 3. Figure 3

The ends of the tape should overlap approximately 13 mm (1/2"). Proceed to install the PTFE tape on the remaining liquid chamber.




WILDEN

EXPLODED VIEW & PARTS LISTING

T15 METAL

Rubber/TPE-Fitted

EXPLODED VIEW

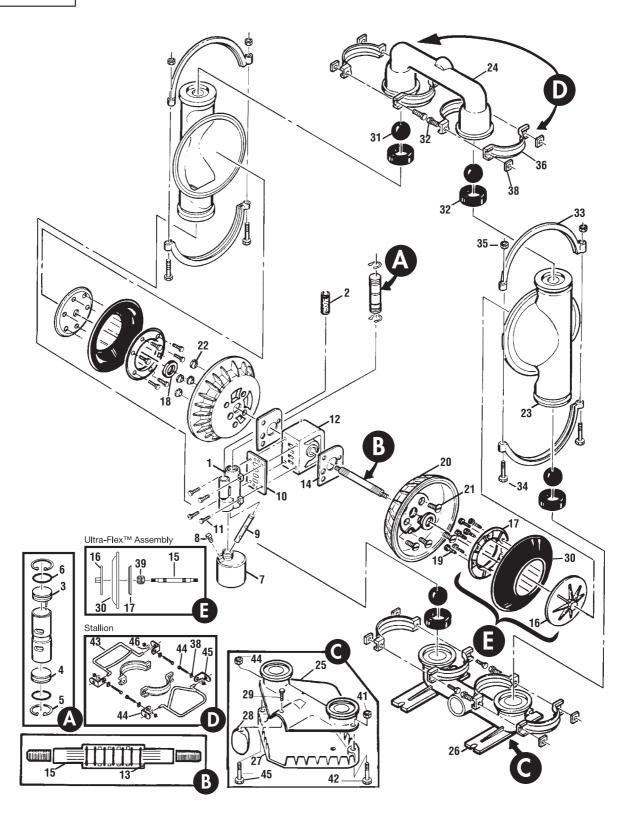



TURBO-FLO*

EXPLODED VIEW & PARTS LISTING

T15 METAL

Rubber-Fitted

PARTS LISTING

Item	Description	Qty.	T15/ AAAPB/0030 P/N	T15/ AAAPB P/N	T15/ AAAPB/0033 P/N	T15/ AAAPB/0003 P/N	T15/ AAAAB/0030 P/N	T15/ AAAAB/0033 P/N	T15/ AAAAB P/N	T15/ AAAAB/0003 P/N	T15/ AAAAD/0050 P/N
1	Air Valve Assembly ¹	1	15-2000-07	15-2000-07	15-2000-07	15-2000-07	15-2000-07	15-2000-07	15-2000-07	15-2000-07	15-2080-07
2	Air Valve Screen	1	08-2500-07	08-2500-07	08-2500-07	08-2500-07	08-2500-07	08-2500-07	08-2500-07	08-2500-07	08-2500-07
3	Air Valve End Cap with Guide (Top)	1	15-2300-23	15-2300-23	15-2300-23	15-2300-23	15-2300-23	15-2300-23	15-2300-23	15-2300-23	15-2300-23
4	Air Valve End Cap without Guide (Bottom)	1	15-2330-23	15-2330-23	15-2330-23	15-2330-23	15-2330-23	15-2330-23	15-2330-23	15-2330-23	15-2330-23
5	Air Valve Snap Ring	2	15-2650-03	15-2650-03	15-2650-03	15-2650-03	15-2650-03	15-2650-03	15-2650-03	15-2650-03	15-2650-03
6	Air Valve Cap O-Ring	2	15-2390-52	15-2390-52	15-2390-52	15-2390-52	15-2390-52	15-2390-52	15-2390-52	15-2390-52	15-2390-52
7	Oil Bottle (Optional)	1	15-2850-01	15-2850-01	15-2850-01	15-2850-01	15-2850-01	15-2850-01	15-2850-01	15-2850-01	15-2850-01
8	Plug (Optional) 3/8"	1	15-7000-07	15-7000-07	15-7000-07	15-7000-07	15-7000-07	15-7000-07	15-7000-07	15-7000-07	15-7000-07
9	Capillary Rod (Optional)	1	15-2900-99	15-2900-99	15-2900-99	15-2900-99	15-2900-99	15-2900-99	15-2900-99	15-2900-99	15-2900-99
10	Air Valve Gasket — Buna-N	1	15-2600-52	15-2600-52	15-2600-52	15-2600-52	15-2600-52	15-2600-52	15-2600-52	15-2600-52	15-2600-52
11	Air Valve Screw 5/16"-18 x 2-1/4"	4	08-6000-08	08-6000-08	08-6000-03	08-6000-03	08-6000-08	08-6000-03	08-6000-08	08-6000-03	08-6000-08
12	Center Block	1	15-3100-01-225	15-3100-01-225	15-3100-01-225	15-3100-01-225	15-3100-01-225	15-3100-01-225	15-3100-01-225	15-3100-01-225	15-3100-01-225
13	Center Block Glyd™ Ring	7	15-3210-55-225	15-3210-55-225	15-3210-55-225	15-3210-55-225	15-3210-55-225	15-3210-55-225	15-3210-55-225	15-3210-55-225	15-3210-55-225
14	Block Gasket — Buna-N	2	15-3520-52	15-3520-52	15-3520-52	15-3520-52	15-3520-52	15-3520-52	15-3520-52	15-3520-52	15-3520-52
15	Shaft	1	15-3800-09-07	15-3800-09-07	15-3800-09-07	15-3800-09-07	15-3800-09-07	15-3800-09-07	15-3800-09-07	15-3800-09-07	15-3800-09-65
_	Shaft, Ultra-Flex™	1	15-3800-09-65	15-3800-09-65	15-3800-09-65	15-3800-09-65	15-3800-09-65	15-3800-09-65	15-3800-09-65	15-3800-09-65	15-3800-09-65
16	Piston, Outer	2	15-4550-01	15-4550-01	15-4550-01	15-4550-01	15-4550-01	15-4550-01	15-4550-01	15-4550-01	N/A
L.	Piston, Outer, Ultra-Flex™	2	15-4560-01	15-4560-01	15-4560-01	15-4560-01	15-4560-01	15-4560-01	15-4560-01	15-4560-01	15-4560-01
17	Piston, Inner	2	15-3700-01	15-3700-01	15-3700-01	15-3700-01	15-3700-01	15-3700-01	15-3700-01	15-3700-01	N/A
10	Piston, Inner, Ultra-Flex™	2	15-3760-08	15-3760-08	15-3760-08	15-3760-08	15-3760-08	15-3760-08	15-3760-08	15-3760-08	15-3760-08
18	Washer, Inner Piston Back-up	2 12	15-6850-08	15-6850-08	15-6850-08	15-6850-08	15-6850-08	15-6850-08	15-6850-08	15-6850-08	N/A
19	Piston Assembly — Bolt² 3/8"-16 x 1-1/8"	12	15-6130-08	15-6130-08	15-6130-08	15-6130-08	15-6130-08	15-6130-08	15-6130-08	15-6130-08	15-6720-08 15-6720-08
20	Washer, Flat (Not shown) Air Chamber	2	15-6720-08	15-6720-08	15-6720-08 15-3650-01	15-6720-08	15-6720-08 15-3650-01	15-6720-08	15-6720-08	15-6720-08	15-0720-08
21	Air Chamber Screw 3/8"-16 x 4"	4	15-3650-01 15-6200-08	15-3650-01 15-6200-08	15-6200-08	15-3650-01 15-6200-08	15-6200-08	15-3650-01 15-6200-08	15-3650-01 15-6200-08	15-3650-01 15-6200-08	15-6200-08
22	Air Chamber Screw 3/8 - 16 x 4 Air Chamber Cone Nut 3/8"-16	4	08-6550-08	08-6550-08	08-6550-08	08-6550-08	08-6550-08	08-6550-08	08-6550-08	08-6550-08	08-6550-08
23	Liquid Chamber	2	15-5000-01	15-5000-01	15-5000-01	15-5000-01	15-5000-01	15-5000-01	15-5000-01	15-5000-01	15-5000-01
24	Discharge Manifold	1	15-5020-01	15-5020-01	15-5020-01	15-5020-01	15-5020-01	15-5020-01	15-5020-01	15-5020-01	15-5020-01
25	Inlet Housing — Screened	1	15-5080-01-30	N/R	15-5080-01-30	N/R	15-5080-01-30	15-5080-01-30	N/R	N/R	15-5080-01-30
26	Inlet Housing for Footed Base	1	N/R	15-5080-01	N/R	15-5080-01	N/R	N/R	15-5080-01	15-5080-01	N/R
27	Screen (for P/N 15-5080-01-30 & 15-5080-01-33)	1	15-5620-01	N/R	15-5620-01	N/R	15-5620-01	15-5620-01	N/R	N/R	15-5620-62
28	Suction Hook-up Cover	1	15-5660-01	N/R	15-5660-01	N/R	15-5660-01	15-5660-01	N/R	N/R	15-5660-01
29	Hex Head Machine Screw 3/8"-16 x 7/8"	1	08-6140-08	N/R	08-6140-03	N/R	08-6140-08	08-6140-03	N/R	N/R	08-6140-03
30	Diaphragm*	2	*	*	*	*	*	*	*	*	*
31	Valve Ball*	4	*	*	*	*	*	*	*	*	*
32	Valve Seat*	4	*	*	*	*	*	*	*	*	*
33	Large Clamp Band Assy.	2	15-7300-08	15-7300-08	15-7300-03	15-7300-03	15-7300-08	15-7300-03	15-7300-08	15-7300-03	15-7300-08
34	Large Carriage Bolt 1/2"-13 x 3-1/2"	4	15-6120-08	15-6120-08	15-6120-03	15-6120-03	15-6120-08	15-6120-03	15-6120-08	15-6120-03	15-6120-08
35	Large Hex Nut 1/2"-13	4	15-6420-08	15-6420-08	15-6420-03	15-6420-03	15-6420-08	15-6420-03	15-6420-08	15-6420-03	15-6420-08
36	Small Clamp Band Assy.	4	15-7100-08	15-7100-08	15-7100-03	15-7100-03	15-7100-08	15-7100-03	15-7100-08	15-7100-03	15-7100-08
37	Small Carriage Bolt 3/8"-16 x 2"	8	15-6050-08	15-6050-08	15-6050-03	15-6050-03	15-6050-08	15-6050-03	15-6050-08	15-6050-03	15-6050-08
38	Small Hex Nut 3/8"-16	8	08-6450-08	08-6450-08	08-6450-03	08-6450-03	08-6450-08	08-6450-03	08-6450-08	08-6450-03	08-6450-08
	Muffler (not shown)	1	15-3510-99	15-3510-99	N/A	N/A	15-3510-99	N/A	15-3510-99	N/A	N/R
39	Stallion Ultra-Flex™ Spacer	2	N/R	N/R	N/R	N/R	N/R	N/R	N/R	N/R	15-6900-23-50
40	Check Body (not shown)	1	15-3550-01	N/R	15-3550-01	N/R	15-3550-01	15-3550-01	N/R	N/R	15-3550-01
	Nipple 1" x Close (not shown)	1	15-7420-08	N/R	15-7420-03	N/R	15-7420-08	15-7420-03	N/R	N/R	15-7420-08
L	Check Ball (not shown)	1	15-1450-51	N/R	15-1450-51	N/R	15-1450-51	15-1450-51	N/R	N/R	15-1450-51
41	Hex Nut 3/8"-16 ⁶	2	08-6450-08	N/R	08-6450-03	N/R	08-6450-08	08-6450-03	N/R	N/R	08-6450-03
42	Hex Head Machine Screw 3/8"-16 x 3"6	2	08-6120-08	N/R	08-6120-03	N/R	08-6120-08	08-6120-03	N/R	N/R	08-6120-03
-	Hex Head Machine Screw 3/8"-16 x 3"6 Stallion	3	08-6120-08	N/R	08-6120-03	N/R	08-6120-08	08-6120-03	N/R	N/R	08-6120-03
43	Handle, Collapsible ⁵	2	N/R	N/R	N/R	N/R	N/R	N/R	N/R	N/R	15-7250-08
44	Bracket, Handle	4	N/R	N/R	N/R	N/R	N/R	N/R	N/R	N/R	15-7410-08
45	Small Hex Nut 3/8"-16	4	N/R	N/R	N/R	N/R	N/R	N/R	N/R	N/R	08-6450-08
46	Washer, Flat	4	N/R	N/R	N/R	N/R	N/R	N/R	N/R	N/R	15-6740-08-50

^{*}Refer to corresponding elastomer chart in Section 10.

NOTE: Stallion pumps come standard with rubber Ultra-Flex $^{\text{TM}}$ diaphragms.

0003 Specialty Code = Alloy-Fitted

0022 Specialty Code = Stainless Steel Clamp Bands

0030 Specialty Code = Screen Based

0033 Specialty Code = Screen Based, Alloy-Fitted

0050 Specialty Code = Stallion 0070 Specialty Code = SanifloFDA

All boldface items are primary wear parts.

Rubber-fitted models continue on pages 26-27.

¹Air Valve Assembly includes items 2–7.

²Piston Assembly bolt (P/N 15-6130-08) utilizes a 38" washer (15-6720-08).

 $^{^3}$ T15-0070 pump large clamp band comes with 15-6670-03-70 wing nut and 15-6720-03-70 washer.

 $^{^4\}text{T}15\text{-}0070$ pump small clamp band comes with 08-6770-03-72 wing nut and 08-6720-03-70 washer.

⁵DO NOT hang T15 Stallion pumps by their handles.

 $^{^6}$ Stallion pumps require three (3) each (P/N's 08-6450-03 and 08-6120-03).




TURBO-FLO

EXPLODED VIEW & PARTS LISTING

T15 METAL

Rubber/TPE-Fitted

EXPLODED VIEW

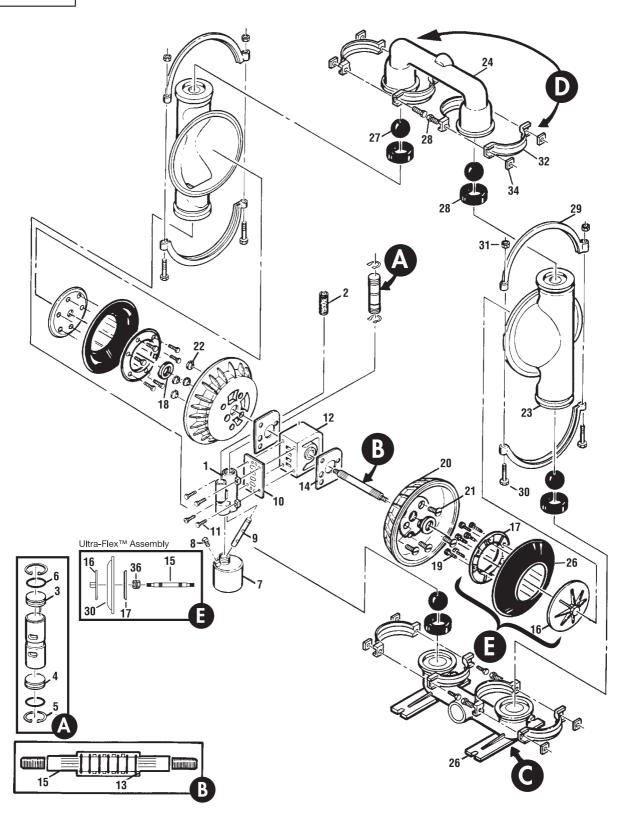





T15 METAL

Rubber/TPE-Fitted

PARTS LISTING

Item	Description	Qty.	T15/ AAAPB/0030 P/N	T15/ AAAPB P/N	T15/ AAAPB/0033 P/N	T15/ AAAPB/0003 P/N	T15/ AAAAB/0030 P/N	T15/ AAAAB/0033 P/N	T15/ AAAAB P/N	T15/ AAAAB/0003 P/N	T15/ AAAAD/0050 P/N
1	Air Valve Assembly ¹	1	15-2000-07	15-2000-07	15-2000-07	15-2000-06	15-2000-07	15-2000-07	15-2000-03	15-2000-07	15-2000-07
2	Air Valve Screen	1	08-2500-07	08-2500-07	08-2500-07	08-2500-03	08-2500-07	08-2500-07	08-2500-03	08-2500-07	08-2500-07
3	Air Valve End Cap with Guide (Top)	1	15-2300-23	15-2300-23	15-2300-23	15-2300-23	15-2300-23	15-2300-23	15-2300-03	15-2300-23	15-2300-23
4	Air Valve End Cap without Guide (Bottom)	1	15-2330-23	15-2330-23	15-2330-23	15-2330-23	15-2330-23	15-2330-23	15-2330-03	15-2330-23	15-2330-23
5	Air Valve Snap Ring	2	15-2650-03	15-2650-03	15-2650-03	15-2650-03	15-2650-03	15-2650-03	15-2650-03	15-2650-03	15-2650-03
6	Air Valve Cap O-Ring	2	15-2390-52	15-2390-52	15-2390-52	15-2390-52	15-2390-52	15-2390-52	15-2390-52	15-2390-52	15-2390-52
7	Oil Bottle (Optional)	1	15-2850-01	15-2850-01	15-2850-01	15-2850-01	15-2850-01	15-2850-01	N/A	15-2850-01	15-2850-01
8	Plug (Optional) 38"	1	15-7000-07	15-7000-07	15-7000-07	15-7000-07	15-7000-07	15-7000-07	N/A	15-7000-07	15-7000-07
9	Capillary Rod (Optional)	1	15-2900-99	15-2900-99	15-2900-99	15-2900-99	15-2900-99	15-2900-99	N/A	15-2900-99	15-2900-99
10	Air Valve Gasket — Buna-N	1	15-2600-52	15-2600-52	15-2600-52	15-2600-52	15-2600-52	15-2600-52	15-2600-52	15-2600-52	15-2600-52
11	Air Valve Screw 5/16"-18 x 2-1/4"	4	08-6000-03	08-6000-03	08-6000-03	08-6000-03	08-6000-03	08-6000-03	08-6000-03	08-6000-03	08-6000-03
12	Center Block	1	15-3100-03-225	15-3100-20-225	15-3100-20-225	15-3100-06-225	15-3100-03-225	15-3100-20-225	15-3100-03-225	15-3100-20-225	15-3100-20-225
13	Center Block Glyd™ Ring	7	15-3210-55-225	15-3210-55-225	15-3210-55-225	15-3210-55-225	15-3210-55-225	15-3210-55-225	15-3210-55-225	15-3210-55-225	15-3210-55-225
14	Block Gasket — Buna-N	2	15-3520-52	15-3520-52	15-3520-52	15-3520-52	15-3520-52	15-3520-52	15-3520-52	15-3520-52	15-3520-52
15	Shaft	1	15-3800-09-07	15-3800-09-07	15-3800-09-07	15-3800-09-07	15-3800-09-07	15-3800-09-07	15-3800-09-07	15-3800-09-07	15-3800-09-07
	Shaft, Ultra-Flex™	1	15-3800-09-65	15-3800-09-65	15-3800-09-65	15-3800-09-65	15-3800-09-65	15-3800-09-65	15-3800-09-65	15-3800-09-65	15-3800-09-65
16	Piston, Outer	2	15-4550-04	15-4550-04	15-4550-03	15-4550-03	15-4550-03	15-4550-03	15-4550-03	15-4550-02	15-4550-02
	Piston, Outer, Ultra-Flex™	2	15-4560-04	15-4560-04	15-4560-03	15-4560-03	15-4560-03	15-4560-03	15-4560-03	15-4560-02	15-4560-02
17	Piston, Inner	2	15-3700-03	15-3700-01	15-3700-01	15-3700-01	15-3700-03	15-3700-01	15-3700-03	15-3700-01	15-3700-01
	Piston, Inner, Ultra-Flex™	2	15-3760-08	15-3760-08	15-3760-08	15-3760-08	15-3760-08	15-3760-08	15-3760-08	15-3760-08	15-3760-08
18	Washer, Inner Piston Back-up	2	15-6850-08	15-6850-08	15-6850-08	15-6850-08	15-6850-08	15-6850-08	15-6850-08	15-6850-08	15-6850-08
19	Piston Assembly — Bolt ² 3/8"-16 x 1-1/8"	12	15-6130-08	15-6130-08	15-6130-08	15-6130-08	15-6130-08	15-6130-08	15-6130-08	15-6130-08	15-6130-08
20	Air Chamber	2	15-3650-03	15-3650-02	15-3650-01	15-3650-06	15-3650-03	15-3650-02	15-3650-03	15-3650-01	15-3650-01
21	Air Chamber Screw 3/8"-16 x 4"	4	15-6200-03	15-6200-08	15-6200-08	15-6200-03	15-6200-03	15-6200-08	15-6200-03	15-6200-08	15-6200-08
22	Air Chamber Cone Nut 3/8"-16	4	08-6550-03	08-6550-08	08-6550-08	08-6550-03	08-6550-03	08-6550-08	08-6550-03	08-6550-08	08-6550-08
23	Liquid Chamber	2	15-5000-04	15-5000-04	15-5000-03	15-5000-03	15-5000-03	15-5000-03	15-5000-03	15-5000-02	15-5000-02
24	Discharge Manifold	1	15-5020-04	15-5020-04	15-5020-03	15-5020-03	15-5020-03	15-5020-03	15-5020-03	15-5020-02	15-5020-02
25	Inlet Housing for Footed Base	1	15-5080-04	15-5080-04	15-5080-03	15-5080-03	15-5080-03	15-5080-03	15-5080-03	15-5080-02	15-5080-02
26	Diaphragm*	2	*	*	*	*	*	*	*	*	*
27	Valve Ball*	4	*	*	*	*	*	*	*	*	*
28	Valve Seat*	4	*	*	*	*	*	*	*	*	*
29	Large Clamp Band Assy.	2	15-7300-03	15-7300-03	15-7300-03	15-7300-03	15-7300-03	15-7300-03	15-7300-03	15-7300-08	15-7300-03
30	Large Carriage Bolt 1/2"-13 x 3-1/2"	4	15-6120-03	15-6120-03	15-6120-03	15-6120-03	15-6120-03	15-6120-03	15-6120-03	15-6120-08	15-6120-03
31	Large Hex Nut 1/2"-13	4	15-6420-03	15-6420-03	15-6420-03	15-6420-03	15-6420-03	15-6420-03	15-6420-03	15-6420-08	15-6420-03
32	Small Clamp Band Assy.	4	15-7100-03	15-7100-03	15-7100-03	15-7100-03	15-7100-03	15-7100-03	15-7100-03	15-7100-08	15-7100-03
	Washer, Flat, 7/8" (not shown)	4	15-6720-07-70	15-6720-07-70	15-6720-07-70	15-6720-07-70	15-6720-07-70	15-6720-07-70	15-6720-07-70	15-6720-07-70	15-6720-07-70
33	Small Carriage Bolt 3/8"-16 x 2"	8	15-6050-03	15-6050-03	15-6050-03	15-6050-03	15-6050-03	15-6050-03	15-6050-03	15-6050-08	15-6050-03
34	Small Hex Nut 3/8"-16	8	08-6450-03	08-6450-03	08-6450-03	08-6450-03	08-6450-03	08-6450-03	08-6450-03	08-6450-08	08-6450-03
35	Washer, Flat	8	08-6720-07-70	08-6720-07-70	08-6720-07-70	08-6720-07-70	08-6720-07-70	08-6720-07-70	08-6720-07-70	08-6720-07-70	08-6720-07-70
	Muffler (not shown)	1	15-3510-99	15-3510-99	15-3510-99	15-3510-99	15-3510-99	15-3510-99	15-3510-99	15-3510-99	15-3510-99
36	Stallion Ultra-Flex™ Spacer	2	N/R	N/R	N/R	N/R	N/R	N/R	N/R	N/R	N/R

^{*}Refer to corresponding elastomer chart in Section 10.

All boldface items are primary wear parts.

¹Air Valve Assembly includes items 2–7.

²Piston Assembly bolt (P/N 15-6130-08) utilizes a 3/8" washer (15-6720-08).

³T15-0070 pump large clamp band comes with 15-6670-03-70 wing nut and 15-6720-03-70 washer.

⁴T15-0070 pump small clamp band comes with 08-6770-03-72 wing nut and 08-6720-03-70 washer.

⁵DO NOT hang T15 Stallion pumps by their handles.

 $^{^6}$ Stallion pumps require three (3) each (P/N's 08-6450-03 and 08-6120-03).

NOTE: Stallion pumps come standard with rubber Ultra-Flex $^{\text{TM}}$ diaphragms.

⁰⁰⁰³ Specialty Code = Alloy-Fitted

⁰⁰²² Specialty Code = Stainless Steel Clamp Bands

⁰⁰³⁰ Specialty Code = Screen Based

⁰⁰³³ Specialty Code = Screen Based, Alloy-Fitted

⁰⁰⁵⁰ Specialty Code = Stallion

⁰⁰⁷⁰ Specialty Code = SanifloFDA




TURBOFLO

EXPLODED VIEW & PARTS LISTING

T15 METAL

PTFE-Fitted

EXPLODED VIEW

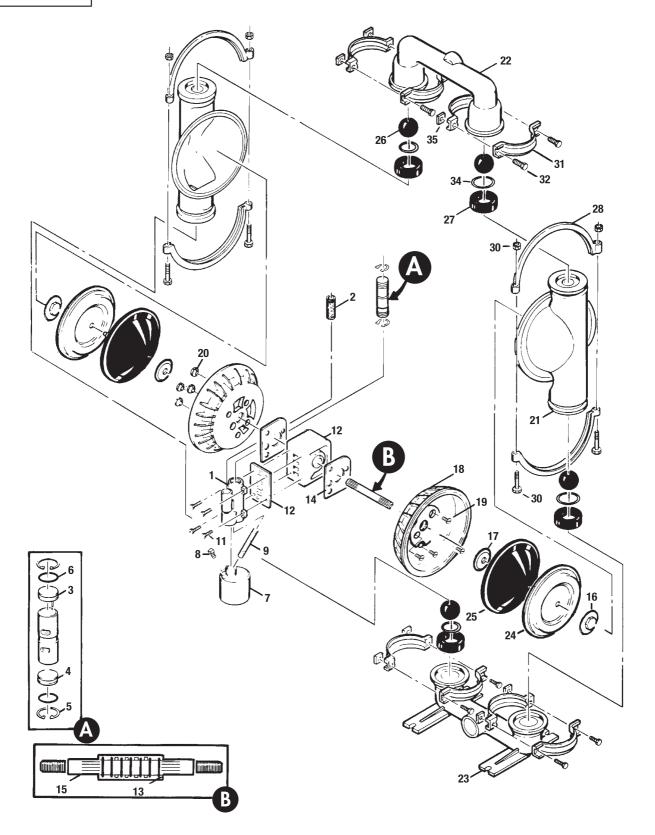





T15 METAL

PTFE-Fitted

PARTS LISTING

Item	Description	Qty.	T15/AAAPB P/N	T15/AAAAB P/N	T15/ AAAPB/0003 P/N	T15/ AAAAB/0003 P/N	T15/SSAPB P/N	T15/SSSSB P/N	T15/SSWPB P/N	T15/SSSSS P/N	T15/WSAPB P/N	T15/WSWPB P/N	T15/ SSSSN/0070 P/N
1	Air Valve Assembly ¹	1	15-2000-07	15-2000-07	15-2000-07	15-2000-07	15-2000-07	15-2000-07	15-2000-07	15-2000-03	15-2000-07	15-2000-07	15-2000-06
2	Air Valve Screen	1	08-2500-07	08-2500-07	08-2500-07	08-2500-07	08-2500-07	08-2500-07	08-2500-07	08-2500-03	08-2500-07	08-2500-07	08-2500-03
3	Air Valve End Cap w/Guide (top)	1	15-2300-23	15-2300-23	15-2300-23	15-2300-23	15-2300-23	15-2300-23	15-2300-23	15-2300-03	15-2300-23	15-2300-23	15-2300-23
4	Air Valve End Cap without Guide (bottom)	1	15-2330-23	15-2330-23	15-2330-23	15-2330-23	15-2330-23	15-2330-23	15-2330-23	15-2330-03	15-2330-23	15-2330-23	15-2330-23
5	Air Valve Snap Ring	2	15-2650-03	15-2650-03	15-2650-03	15-2650-03	15-2650-03	15-2650-03	15-2650-03	15-2650-03	15-2650-03	15-2650-03	15-2650-03
6	Air Valve Cap O-Ring	2	15-2390-52	15-2390-52	15-2390-52	15-2390-52	15-2390-52	15-2390-52	15-2390-52	15-2390-52	15-2390-52	15-2390-52	15-2390-52
7	Oil Bottle (Optional)	1	15-2850-01	15-2850-01	15-2850-01	15-2850-01	15-2850-01	15-2850-01	15-2850-01	N/A	15-2850-01	15-2850-01	N/A
8	Plug (Optional)	1	15-7000-07	15-7000-07	15-7000-07	15-7000-07	15-7000-07	15-7000-07	15-7000-07	N/A	15-7000-07	15-7000-07	N/A
9	Capillary Rod (Optional)	1	15-2900-99	15-2900-99	15-2900-99	15-2900-99	15-2900-99	15-2900-99	15-2900-99	N/A	15-2900-99	15-2900-99	N/A
10	Air Valve Gasket — Buna-N	1	15-2600-52	15-2600-52	15-2600-52	15-2600-52	15-2600-52	15-2600-52	15-2600-52	15-2600-52	15-2600-52	15-2600-52	15-2600-52
11	Air Valve Screw	4	08-6000-08	08-6000-08	08-6000-03	08-6000-03	08-6000-03	08-6000-03	08-6000-03	08-6000-03	08-6000-08	08-6000-08	08-6000-03
12	Center Block	1	15-3100-20-225	15-3100-01-225	15-3100-20-225	15-3100-01-225	15-3100-20-225	15-3100-03-225	15-3100-20-225	15-3100-03-225	15-3100-20-225	15-3100-20-225	15-3100-03-225
13	Center Block Glyd™ Ring	7	15-3210-55-225	15-3210-55-225	15-3210-55-225	15-3210-55-225	15-3210-55-225	15-3210-55-225	15-3210-55-225	15-3210-55-225	15-3210-55-225	15-3210-55-225	15-3210-55-225
14	Block Gasket — Buna-N	2	15-3520-52	15-3520-52	15-3520-52	15-3520-52	15-3520-52	15-3520-52	15-3520-52	15-3520-52	15-3520-52	15-3520-52	15-3520-52
15	Shaft	1	15-3800-09-07	15-3800-09-07	15-3800-09-07	15-3800-09-07	15-3800-09-07	15-3800-09-07	15-3800-09-07	15-3800-09-07	15-3800-09-07	15-3800-09-07	15-3800-09-07
16	Piston, Outer	2	15-4600-03	15-4600-03	15-4600-03	15-4600-03	15-4600-03	15-4600-03	15-4600-03	15-4600-03	15-4600-03	15-4600-03	15-4600-03
17	Piston, Inner	2	15-3750-03	15-3750-03	15-3750-03	15-3750-03	15-3750-03	15-3750-03	15-3750-03	15-3750-03	15-3750-03	15-3750-03	15-3750-03
18	Air Chamber	2	15-3650-01	15-3650-01	15-3650-01	15-3650-01	15-3650-01	15-3650-03	15-3650-02	15-3650-03	15-3650-01	15-3650-02	15-3650-03
19	Air Chamber Screw	4	15-6200-08	15-6200-08	15-6200-08	15-6200-08	15-6200-08	15-6200-03	15-6200-08	15-6200-03	15-6200-08	15-6200-08	15-6200-03
20	Air Chamber Cone Nut	4	08-6550-08	08-6550-08	08-6550-08	08-6550-08	08-6550-08	08-6550-03	08-6550-08	08-6550-03	08-6550-08	08-6550-08	08-6550-03
21	Liquid Chamber	2	15-5000-01	15-5000-01	15-5000-01	15-5000-01	15-5000-03	15-5000-03	15-5000-03	15-5000-03	15-5000-02	15-5000-02	15-5000-03
22	Discharge Manifold	1	15-5020-01	15-5020-01	15-5020-01	15-5020-01	15-5020-03	15-5020-03	15-5020-03	15-5020-03	15-5020-02	15-5020-02	15-5020-03-70
23	Inlet Manifold	1	15-5080-01	15-5080-01	15-5080-01	15-5080-01	15-5080-03	15-5080-03	15-5080-03	15-5080-03	15-5080-02	15-5080-02	15-5080-03-70
24	Diaphragm	2	15-1010-55	15-1010-55	15-1010-55	15-1010-55	15-1010-55	15-1010-55	15-1010-55	15-1010-55	15-1010-55	15-1010-55	15-1010-55
25	Back-up Diaphragm	2	15-1060-51	15-1060-51	15-1060-51	15-1060-51	15-1060-51	15-1060-51	15-1060-51	15-1060-51	15-1060-51	15-1060-51	15-1060-51
26	Valve Ball	4	15-1080-55	15-1080-55	15-1080-55	15-1080-55	15-1080-55	15-1080-55	15-1080-55	15-1080-55	15-1080-55	15-1080-55	15-1080-55
27	Valve Seat	4	15-1121-01	15-1121-01	15-1121-01	15-1121-01	15-1121-03	15-1121-03	15-1121-03	15-1121-03	15-1121-08	15-1121-08	15-1121-03
28	Large Clamp Band Assy.	2	15-7300-03	15-7300-03	15-7300-03	15-7300-03	15-7300-03	15-7300-03	15-7300-03	15-7300-03	15-7300-03	15-7300-03	15-7300-03-70
29	Large Carriage Bolt	4	15-6120-03	15-6120-03	15-6120-03	15-6120-03	15-6120-03	15-6120-03	15-6120-03	15-6120-03	15-6120-03	15-6120-03	15-6120-03
30	Large Hex Nut ²	4	15-6420-03	15-6420-03	15-6420-03	15-6420-03	15-6420-03	15-6420-03	15-6420-03	15-6420-03	15-6420-03	15-6420-03	15-6670-03-702
31	Small Clamp Band Assy.	4	15-7100-03	15-7100-03	15-7100-03	15-7100-03	15-7100-03	15-7100-03	15-7100-03	15-7100-03	15-7100-03	15-7100-03	15-7100-03-70
	Washer, Flat, 7/8" (not shown)	4	15-6720-07-70	15-6720-07-70	15-6720-07-70	15-6720-07-70	15-6720-07-70	15-6720-07-70	15-6720-07-70	15-6720-07-70	15-6720-07-70	15-6720-07-70	15-6720-07-70
32	Small Carriage Bolt	8	15-6050-03	15-6050-03	15-6050-03	15-6050-03	15-6050-03	15-6050-03	15-6050-03	15-6050-03	15-6050-03	15-6050-03	15-6050-03
33	Small Hex Nut ³	8	08-6450-03	08-6450-03	08-6450-03	08-6450-03	08-6450-03	08-6450-03	08-6450-03	08-6450-03	08-6450-03	08-6450-03	08-6670-03-723
34	PTFE Valve Seat O-Ring	4	15-1200-55	15-1200-55	15-1200-55	15-1200-55	15-1200-55	15-1200-55	15-1200-55	15-1200-55	15-1200-55	15-1200-55	15-1200-55
	Muffler (not shown)	1	15-3510-99	15-3510-99	15-3510-99	15-3510-99	15-3510-99	15-3510-99	15-3510-99	15-3510-99	15-3510-99	15-3510-99	15-3510-99
	Washer, Flat (not shown)	8	08-6720-07-70	08-6720-07-70	N/A	N/A	08-6720-07-70	08-6720-07-70	08-6720-07-70	08-6720-07-70	08-6720-07-70	08-6720-07-70	08-6720-07-70
	/- l A l. l : l			2200 52									

¹Air Valve Assembly includes parts thru 15-2390-52.

0003 Specialty Code = Alloy-Fitted 0070 Specialty Code = SanifloFDA


All boldface items are primary wear parts.

 $^{^2\!}T15/\!SSSN$ pump large clamp band comes with 15-6670-03-70 wing nut and 15-6720-07-70 washer.

 $^{^3\}text{T}15/\text{SSSN}$ pump small clamp band comes with 08-6670-03-72 wing nut and 08-6720-07-70 washer.

A15 METAL

EXPLODED VIEW

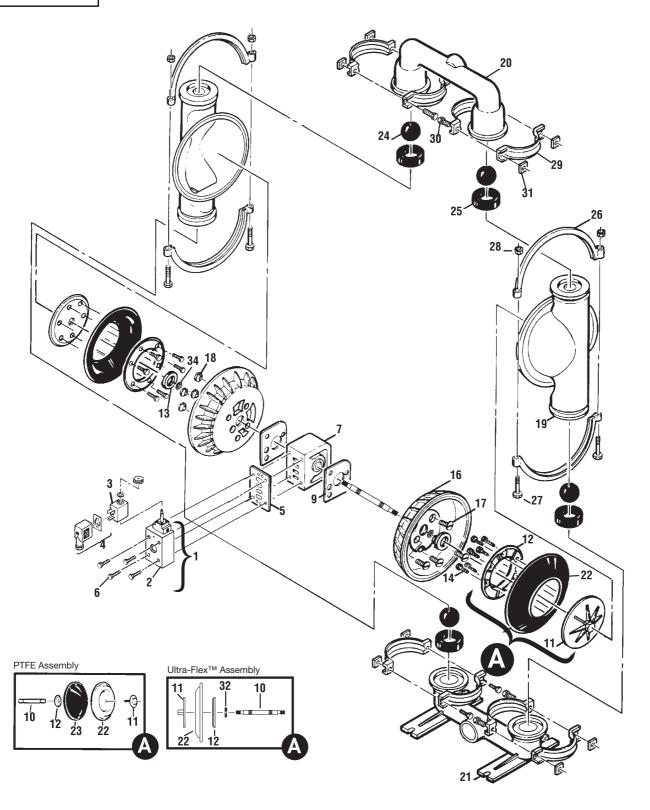





A15 METAL

PARTS LISTING

				Rubbe	r-Fitted			PTFE-	-Fitted	
			A15/							
			AAAPA/0150	HHAPA/0150	SSSSA/0150	WWAPA/0150	AAAPA/0150	HHAPA/0150	SSSSA/0150	WWAPA/0150
Item	Description	Qty.	P/N							
1	Solenoid Valve Assembly	1	15-2000-99-150	15-2000-99-150	15-2000-99-150	15-2000-99-150	15-2000-99-150	15-2000-99-150	15-2000-99-150	15-2000-99-150
2	Main Valve Body	1	15-2000-01-150	15-2000-01-150	15-2000-01-150	15-2000-01-150	15-2000-01-150	15-2000-01-150	15-2000-01-150	15-2000-01-150
3	Coil	1	00-2110-99-150	00-2110-99-150	00-2110-99-150	00-2110-99-150	00-2110-99-150	00-2110-99-150	00-2110-99-150	00-2110-99-150
4	Terminal Connector	1	00-2130-99	00-2130-99	00-2130-99	00-2130-99	00-2130-99	00-2130-99	00-2130-99	00-2130-99
5	Air Valve Gasket — Buna-N	1	15-2600-52	15-2600-52	15-2600-52	15-2600-52	15-2600-52	15-2600-52	15-2600-52	15-2600-52
6	Air Valve Screw	4	08-6000-08	08-6000-03	08-6000-03	08-6000-08	08-6000-08	08-6000-03	08-6000-03	08-6000-08
7	Center Block	1	15-3100-20-225	15-3100-20-225	15-3100-03-225	15-3100-20-225	15-3100-20-225	15-3100-20-225	15-3100-03-225	15-3100-20-225
8	Center Block Glyd™ Ring	7	15-3210-55-225	15-3210-55-225	15-3210-55-225	15-3210-55-225	15-3210-55-225	15-3210-55-225	15-3210-55-225	15-3210-55-225
9	Block Gasket — Buna-N	2	15-3520-52	15-3520-52	15-3520-52	15-3520-52	15-3520-52	15-3520-52	15-3520-52	15-3520-52
10	Shaft	1	15-3805-09-07	15-3805-09-07	15-3805-09-07	15-3805-09-07	15-3805-09-07	15-3805-09-07	15-3805-09-07	15-3805-09-07
11	Piston, Outer	2	15-4550-01	15-4550-04	15-4550-03	15-4550-02	15-4600-03	15-4600-04	15-4600-03	15-4600-03
	Piston, Outer, Ultra-Flex™	2	15-4560-01	15-4560-04	15-4560-03	15-4560-02	N/A	N/A	N/A	N/A
12	Piston, Inner	2	15-3700-01	15-3700-01	15-3700-03	15-3700-01	15-3750-03	15-3750-03	15-3750-03	15-3750-03
	Piston, Inner, Ultra-Flex™	2	15-3760-08	15-3760-08	15-3760-08	15-3760-08	N/A	N/A	N/A	N/A
13	Washer, Inner Piston Back-up	2	15-6850-08	15-6850-08	15-6850-08	15-6850-08	N/A	N/A	N/A	N/A
14	Piston Assembly — Bolt2 3/8"-16 x 11/8"	12	15-6130-08	15-6130-08	15-6130-08	15-6130-08	N/A	N/A	N/A	N/A
15	Washer, Flat (Not shown)	12	15-6720-08	15-6720-08	15-6720-08	15-6720-08	N/A	N/A	N/A	N/A
16	Air Chamber	2	15-3650-01	15-3650-01	15-3650-03	15-3650-01	15-3650-01	15-3650-01	15-3650-03	15-3650-01
17	Air Chamber Screw 3/8"-16 x 4"	4	15-6200-08	15-6200-08	15-6200-03	15-6200-08	15-6200-08	15-6200-08	15-6200-03	15-6200-08
18	Air Chamber Cone Nut 3/8"-16	4	08-6550-08	08-6550-08	08-6550-03	08-6550-08	08-6550-08	08-6550-08	08-6550-03	08-6550-08
19	Liquid Chamber	2	15-5000-01	15-5000-04	15-5000-03	15-5000-02	15-5000-01	15-5000-04	15-5000-03	15-5000-02
20	Discharge Manifold	1	15-5020-01	15-5020-04	15-5020-03	15-5020-02	15-5020-01	15-5020-04	15-5020-03	15-5020-02
21	Inlet Housing for Footed Base	1	15-5080-01	15-5080-04	15-5080-03	15-5080-02	15-5080-01	15-5080-04	15-5080-03	15-5080-02
22	Diaphragm*	2	*	*	*	*	15-1010-55	15-1010-55	15-1010-55	15-1010-55
23	Back-up Diaphragm	2	N/R	N/R	N/R	N/R	15-1060-51	15-1060-51	15-1060-51	15-1060-51
24	Valve Ball*	4	*	*	*	*	15-1080-55	15-1080-55	15-1080-55	15-1080-55
25	Valve Seat*	4	*	*	*	*	15-1121-01	15-1121-04	15-1121-03	15-1121-08
26	Large Clamp Band Assy.	2	15-7300-08	15-7300-03	15-7300-03	15-7300-08	15-7300-03	15-7300-03	15-7300-03	15-7300-03
27	Large Carriage Bolt 1/2"-13 x 31/2"	4	15-6120-08	15-6120-03	15-6120-03	15-6120-08	15-6120-03	15-6120-03	15-6120-03	15-6120-03
28	Large Hex Nut 1/2"-13	4	15-6420-08	15-6420-03	15-6420-03	15-6420-08	15-6420-03	15-6420-03	15-6420-03	15-6420-03
29	Small Clamp Band Assy.	4	15-7100-08	15-7100-03	15-7100-03	15-7100-08	15-7100-03	15-7100-03	15-7100-08	15-7100-03
30	Small Carriage Bolt 3/8"-16 x 2"	8	15-6050-08	15-6050-03	15-6050-03	15-6050-08	15-6050-03	15-6050-03	15-6050-08	15-6050-03
31	Small Hex Nut 3/8"-16	8	08-6450-08	08-6450-03	08-6450-03	08-6450-08	08-6450-03	08-6450-03	08-6450-08	08-6450-03
	PTFE Valve Seat O-Ring (Not shown)	4	N/R	N/R	N/R	N/R	15-1200-55	15-1200-55	15-1200-55	15-1200-55
	Muffler (not shown)	1	15-3510-99	15-3510-99	15-3510-99	15-3510-99	15-3510-99	15-3510-99	15-3510-99	15-3510-99
32	Bumper Pad	2	08-6900-23-50	08-6900-23-50	08-6900-23-50	08-6900-23-50	08-6900-23-50	08-6900-23-50	08-6900-23-50	08-6900-23-50

^{*}Refer to corresponding elastomer chart in Section 10.

0150 Specialty Code = Solenoid-Operated, 24V DC

All boldface items are primary wear parts.

¹Solenoid Valve Assembly includes items 2, 3, and 4.

²Piston Assembly bolt (P/N 15-6130-08) utilizes a 3/8" washer (15-6720-08).

NOTE: Additional solenoid options are available. Please consult Section 10 for reference.





ELASTOMER OPTIONS - AIR CONTROLLED

Elastomer Options for T15 Metal Pumps

MATERIAL	Diaphragms (2) P/N	ULTRA-FLEX™ DIAPHRAGMS (2) P/N	VALVE SEAT* VALVE BALLS (4) P/N	VALVE SEATS (4) P/N	O-RINGS (4) P/N
Buna-N	15-1010-52	15-1020-52	15-1080-52	15-1120-52	N/A
Neoprene	15-1010-51	15-1020-51	15-1080-51	15-1120-51	N/A
EPDM	15-1010-54	15-1020-54	15-1080-54	15-1120-54	N/A
Polyurethane	15-1010-50	N/A	15-1080-50	15-1120-50	N/A
Saniflex™	15-1010-56	N/A	15-1080-56	15-1120-56	N/A
PTFE	15-1010-55	N/A	15-1080-55	N/A	15-1200-55
Tetra-Flex™ PTFE	15-1010-64	N/A	N/A	N/A	N/A
Viton®	15-1010-53	15-1020-53	15-1080-53	15-1120-53	N/A
Wil-Flex [™]	15-1010-58	N/A	15-1080-58	15-1120-58	N/A
Fluoro Seal	N/A	N/A	N/A	N/A	15-1200-54
Aluminum	N/A	N/A	N/A	15-1121-01	N/A
Carbon Steel	N/A	N/A	N/A	15-1121-08	N/A
Alloy C	N/A	N/A	N/A	15-1121-04	N/A
Stainless Steel	N/A	N/A	N/A	15-1121-03	N/A
Cast Iron	N/A	N/A	N/A	N/A	N/A

PTFE diaphragms utilize a Neoprene back-up diaphragm (P/N 15-1060-51). Please consult your local distributor.



ELASTOMER OPTIONS - STALLION

Elastomer Options for T15 Metal Stallion Pumps

MATERIAL	Diaphragms (2) P/N	VALVE BALLS (4) P/N	VALVE SEATS (4) P/N
Buna-N	15-1020-52	08-1080-52	15-1120-52-50
Neoprene	15-1020-51	08-1080-51	15-1120-51-50
EPDM	15-1020-54	08-1080-54	15-1120-54-50
Viton®	15-1020-53	08-1080-53	15-1120-53-50

For other elastomer options, refer to your BOM Book.

25 mm (1") solids handling capacity available only with Turbo-Flo™ and Ultra-Flex™ diaphragm configuration.

²Metallic valve seats utilize a PTFE o-ring, P/N 15-1200-55. Fluoro-Seal™ is available upon request.

³Ultra-Flex™ diaphragms require a special inner piston (P/N 15-3760-08) and a spacer (P/N 15-6850-08).

^{*}Note: Rubber valve seats do not require an o-ring.





ELECTRICAL REFERENCE

NEMA 4 / UL / CSA

		Voltage ±10%						
		A	AC			AC		
	DC		Power (W)	DC				Resistivity
Part Number		60 Hz	50 Hz	±10%		Inrush	Holding	(Ω)
00-2110-99-150	24	48	44	4.8	.20	.20	.20	121
00-2110-99-151	12	24	22	4.8	.40	.40	.40	32
00-2110-99-155	60	120	110	4.8	.08	.08	.06	840

NEMA 7 / UL / CSA

		Voltage ±10%				Current (A)		
		Α	AC			AC		
	DC			Power (W)	DC			Resistivity
Part Number		60 Hz	50 Hz	±10%		Inrush	Holding	(Ω)
00-2110-99-153	12	24	22	7	.60	.55	.32	19
00-2110-99-154	24	48	44	7	.30	.30	.18	75
00-2110-99-156	60	120	110	7	.12	.13	.06	475

INTERNATIONAL EXPLOSION PROOF / CENELEC / PTB FILE # EX-91.C.2027

			Current (A)		
	DC Voltage ±10%	Power (W)			Resistivity
Part Number		±10%	Inrush	Holding	(Ω)
00-2110-99-157	24	3.3	.135	.135	177



WARRANTY

Each and every product manufactured by Wilden Pump and Engineering, LLC is built to meet the highest standards of quality. Every pump is functionally tested to insure integrity of operation.

Wilden Pump and Engineering, LLC warrants that pumps, accessories and parts manufactured or supplied by it to be free from defects in material and workmanship for a period of five (5) years from date of installation or six (6) years from date of manufacture, whichever comes first. Failure due to normal wear, misapplication, or abuse is, of course, excluded from this warranty.

Since the use of Wilden pumps and parts is beyond our control, we cannot guarantee the suitability of any pump or part for a particular application and Wilden Pump and Engineering, LLC shall not be liable for any consequential damage or expense arising from the use or misuse of its products on any application. Responsibility is limited solely to replacement or repair of defective Wilden pumps and parts.

All decisions as to the cause of failure are the sole determination of Wilden Pump and Engineering, LLC.

Prior approval must be obtained from Wilden for return of any items for warranty consideration and must be accompanied by the appropriate MSDS for the product(s) involved. A Return Goods Tag, obtained from an authorized Wilden distributor, must be included with the items which must be shipped freight prepaid.

The foregoing warranty is exclusive and in lieu of all other warranties expressed or implied (whether written or oral) including all implied warranties of merchantability and fitness for any particular purpose. No distributor or other person is authorized to assume any liability or obligation for Wilden Pump and Engineering, LLC other than expressly provided herein.

PLEASE PRINT OR TYPE AND FAX TO WILDEN

PUMP INFORMATION			
Item #	 Serial #		
Company Where Purchased			
YOUR INFORMATION			
Company Name			
Industry			
Name		Title	
Street Address			
City	State	Postal Code	Country
Telephone Fax	E-mail		Web Address
Number of pumps in facility?	Number of W	/ilden pumps?	
Types of pumps in facility (check all that apply): Diaphrag	m 🗌 Centrifi	ugal 🗌 Gear	Submersible Lobe
Other			
Media being pumped?			
How did you hear of Wilden Pump?	Trade Show	w Interr	net/E-mail Distributor
Other			